INSTRUCTION MANUAL



COFFEE GRINDER




IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed:

- Please read these instructions carefully before use.
- Home use only. Do not use for industrial purposes.
- Before the first connecting of the appliance check that voltage indicated on the rating label corresponds to the mains voltage in your home.
- To protect against fire, electrical shock and injury do not immerse the cord or the appliance into water or other liquid.
- Keep away from children.
- Unplug coffee grinder from outlet when not in use and before cleaning.
- Do not operate the appliance if the cord or the plug is damaged or if any malfunctions have happened.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not touch any moving parts.
- To disconnect the unit from the power supply never pull the cord, use the plug.
- To avoid overheating the motor, do not use the coffee grinder for more than 30 second.
- Return malfunctioning appliances for repair to the nearest service center. Repairs should only be undertaken by a qualified electrician.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

STRUCTURE

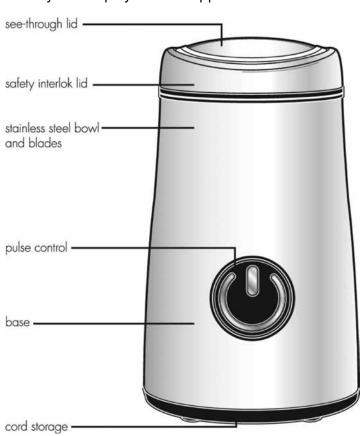

INSTRUCTIONS

- This appliance is for grinding coffee beans only.
- The coffee grinder has a capacity of 50g. Do not fill the grinder beyond the brim.
- Open the cover anti-clockwise.
- Load the coffee beans in the coffee bean container.
- Close the cover, and turn it until the mark on cover corresponds with the mark on housing.
- Fully unwind the cord and plug to the power supply.

The coffee grinder has pulse operating mode. To grind coffee, keep pressing the pulse button.

- Once the desired consistency of grinding has been reached, open the cover and pour the grounds.
- Wait at least one minute between uses, in order to avoid the appliance overheating.
- Do not use the appliance to grind oily beans (e.g. peanuts) or products that are too hard (e.g. rice).

CLEANING INSTRUCTIONS

- Unplug the appliance from the power supply.
- Clean the coffee bean container after each use.
- Wipe the outside and coffee bean container with a damp cloth.
- After washing polish the cover with a dry cloth.

STORAGE

- The base unit has a cord storage compartment, for the cord when appliance is not in use.
- Store the appliance in a cool, dry place.

CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.







GOFFEE GRINDER



Your appliance operates on 220-240V-SOHz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows:

IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL (N)

BROWN: LIVE (L)

GREEN &YELLOW: EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in you plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter "N" or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter "L or coloured RED.

The wire which is coloured GREEN & YELLOW must be connected to the terminal which is marked with the letter "E" or 🕒 or coloured GREEN.

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are lightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

This appliance must be protected by a 13-amp fuse in a 13-amp type (BS1363) plug. Should you need to replace lhe fuse, use only an ASTA approved BS 1362 fuse.

