

INSTRUCTION MANUAL

31430c
elpine[®]
A NAME YOU CAN TRUST!

1400W TEFLON SOLEPLATE DRY IRON



- Smart design
- Non-stick soleplate
- Temperature control
- Indicator light
- Flexible cord
- Over heating protection
- AC 220-240V 50/60Hz


RoHS ✓ **CE**



Elpine B20 3BT UK

Images are for illustrative purposes only,
actual product may vary.

DESCRIPTION:

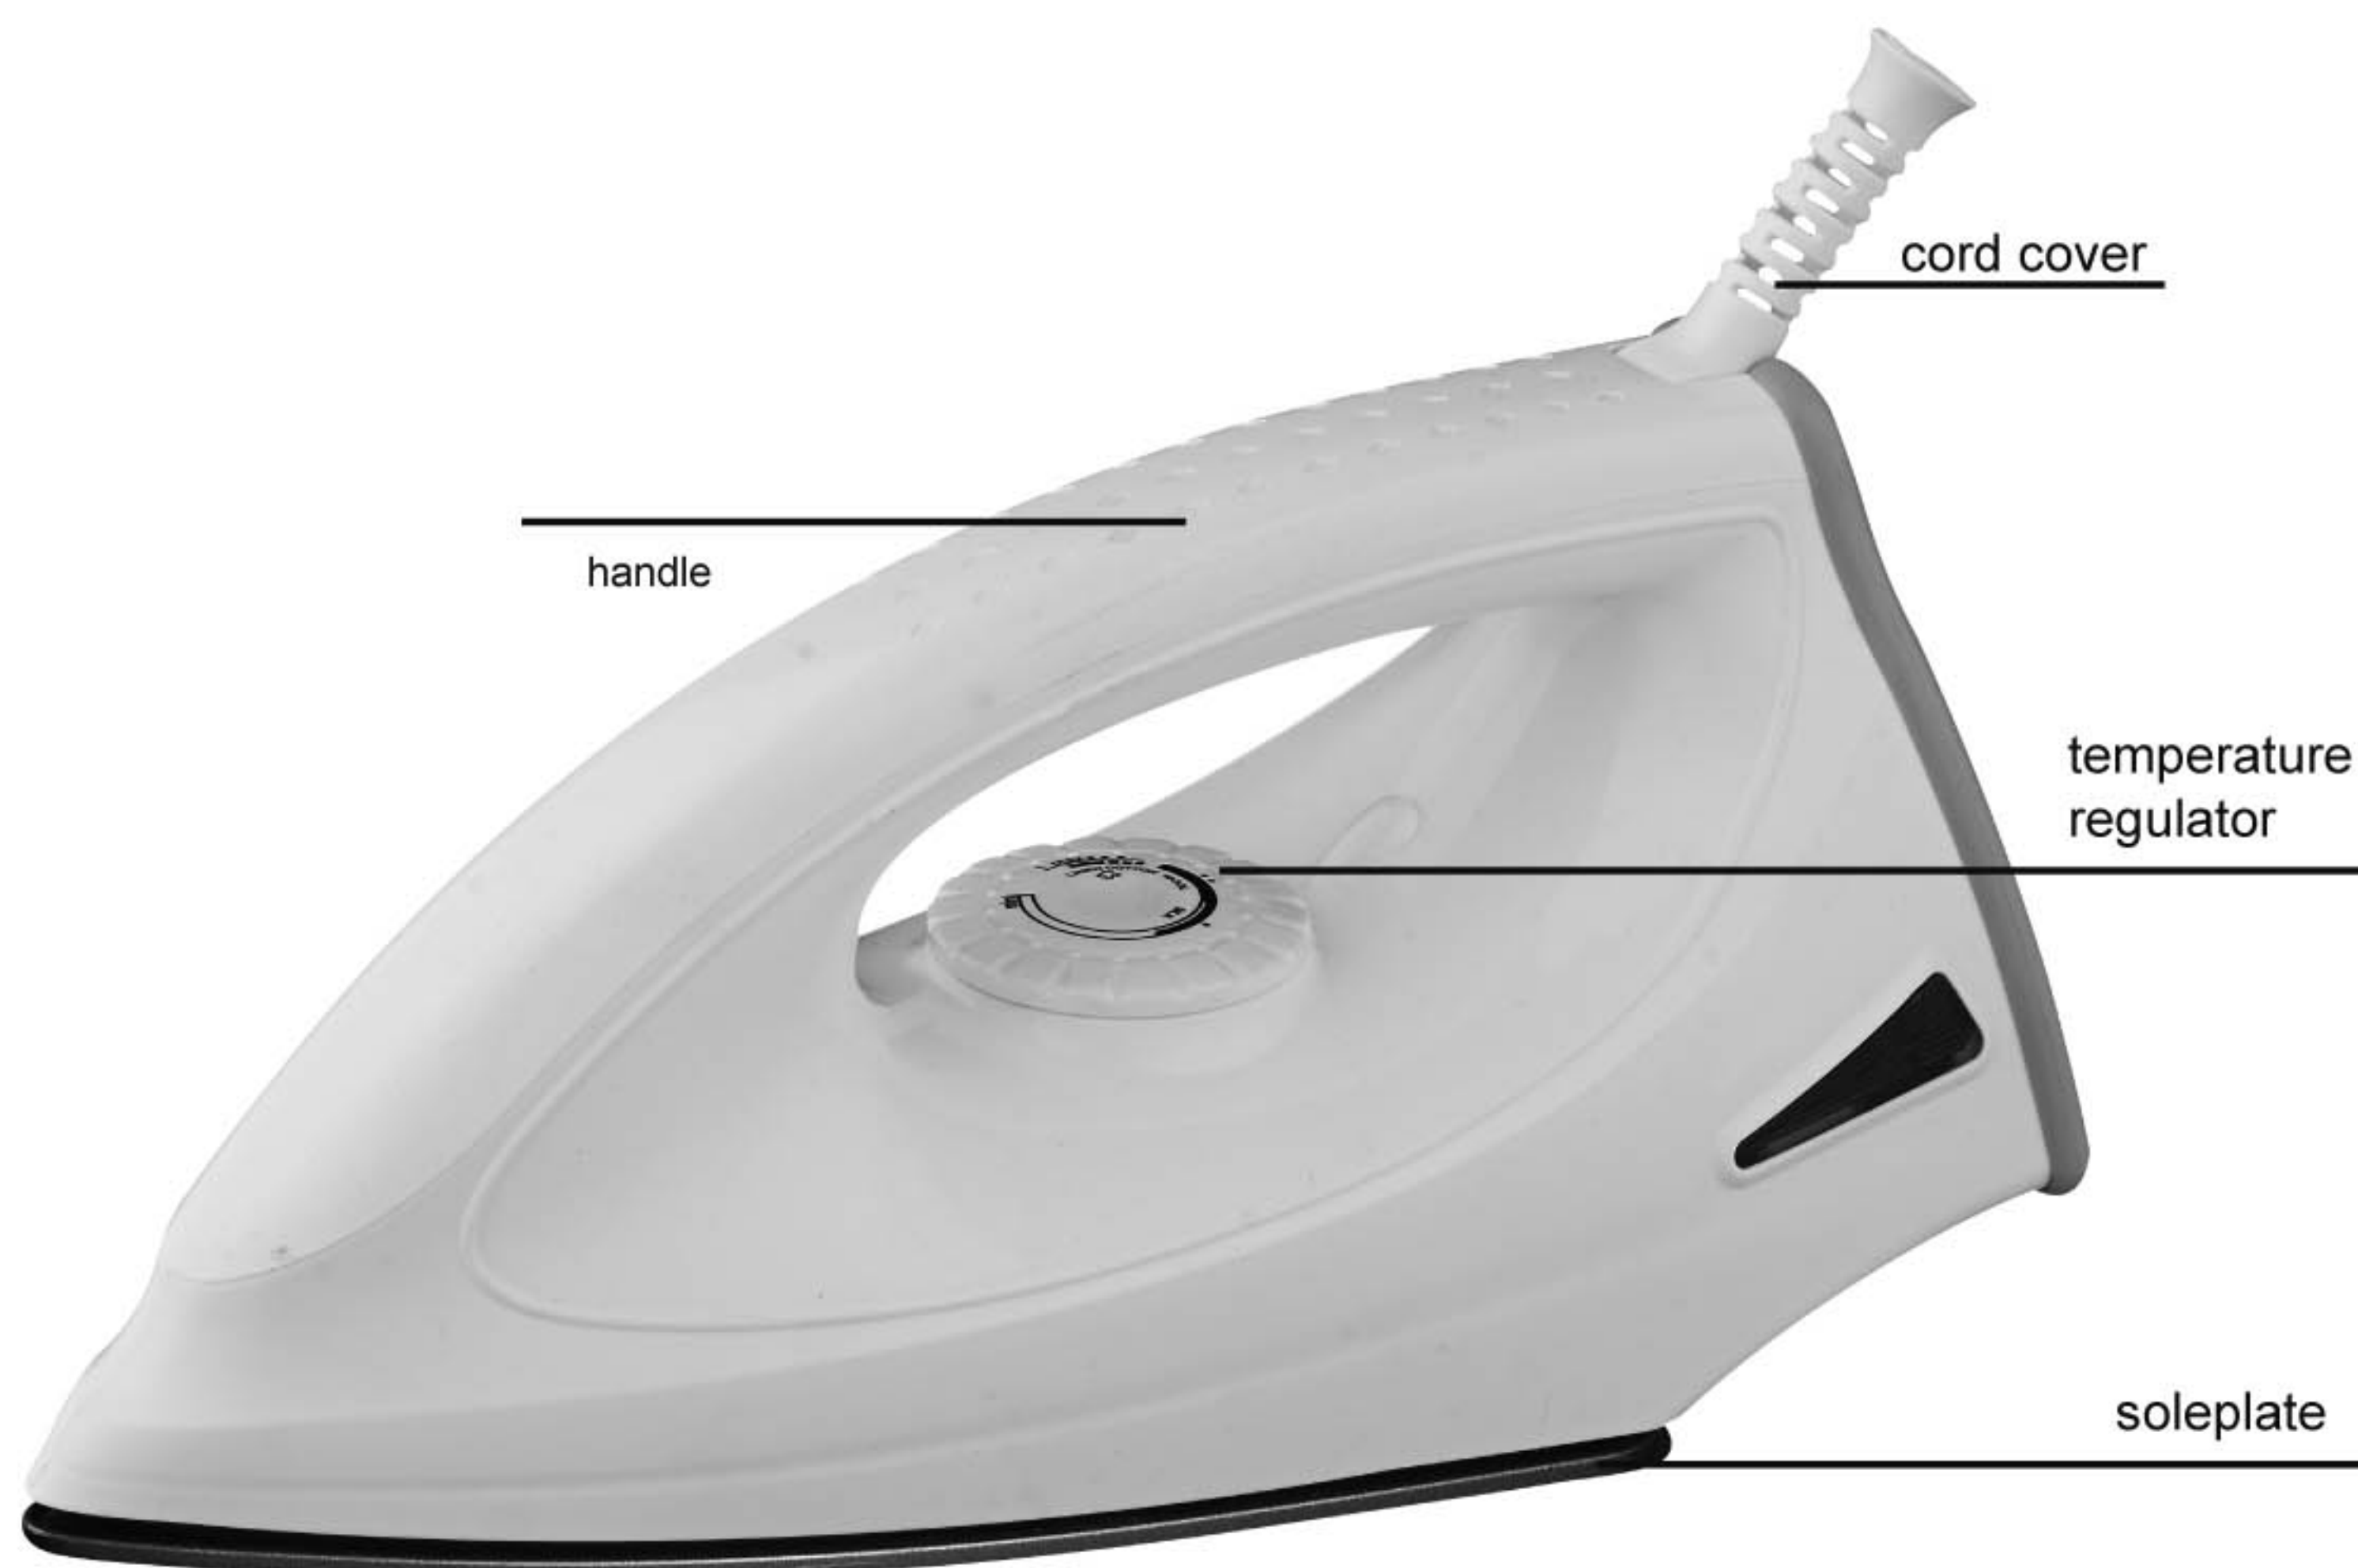

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Please keep these instructions.
- Read all instructions.
- Before connecting the appliance. Check if the voltage indicated on the rating plate corresponds with the mains voltage in your home.
- The user must not leave the iron unattended while connected to the supply.
- The plug of the supply cord must be removed from the socket-outlet before the water reservoir is filled with water.
- The iron shall be used on a stable ironing board.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid a hazard.
- The iron shall not be used if the iron has been dropped at any time, or if there are visible signs of damage or if the iron is leaking. The iron shall be sent to the manufacturer or his qualified service agent before further use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not touch hot surfaces. Use handle or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliances in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.

- Unplug from outlet when not in use and before cleaning. Allow to cool before storing.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the factory for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over the edge of the table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect. Remove plug from outlet. Let iron cool completely before putting away.
- Loop cord loosely around iron when storing.
- If an extension cord is absolutely necessary, a 10 ampere cord should be used.
- Do not use this appliance for anything else other than its intended use. This appliance is for household use only.

IRON TEMPERATURE

- Always check first if a label with ironing instructions is attached to the article to be ironed.(see table)
- Follow these ironing instructions in all cases.
- If ironing instructions are missing but you know the kind of fabric, then see the table for recommended ironing temperatures.
 - The table is valid for the fibre materials only.
 - If some kind of finish has been applied(gloss, wrinkle relief etc.).The textile can best be ironed at a lower temperature.
 - First sort out the fabrics according to ironing temperature: wool with wool, cotton with cotton, etc.
 - The iron heats up quicker than it cools down. Therefore start ironing the articles requiring the lowest temperature such as those made of synthetic fabrics.
 - Then progress to the higher temperatures .Finish by ironing cotton and linen.
 - If the article is made of a mixture of different fibres. You must always select the lowest ironing temperature of the composition of those fibres.(e.g.an article consisting of “60% polyester and 40% cotton” should be ironed on the temperature indicated for polyester.)
 - If you do not know what kind of fabric the article has been made of find a spot which will be invisible when wearing or using the article to try out the ironing temperature.(Always start at a low temperature and increase to one which gives the required results.)
 - Velvet and other textures which rapidly acquired should be ironed in one direction only(with the nap)applying only light pressure. Always keep the iron moving.
 - Iron the reverse side of synthetic materials and silk to prevent shining spots. To prevent staining do not use the spray on silk or other delicate fabrics.

Setting the temperature

- Set the appropriate ironing temperature indicated in the ironing instructions of in the fabric table by means of the temperature dial.
- Insert the mains plug into the wall socket. The pilot light will now come on.
- When the pilot light has gone out and has come on again you can start ironing.
- The pilot light will come on from time to time during ironing. This has no effect on the ironing, so simply continue.
- If you set the temperature control to a lower setting after ironing at a high temperature, do not recommence ironing before the pilot light comes on again.

Ironing tips

- Iron with a straight back. Adjust the height of the ironing board so that the handle of the iron is on the same level as your elbow.

● Pressing onto the iron is not necessary provided that the temperature has been set correctly. Ironing is most effective if the laundry is slightly damp.

When finished ironing

- Place the iron on its rear side.
- Set the temperature dial to position " MIN " .
- Remove the mains plug from the wall socket.
- Let the iron cool down for at least 30minutes.
- You can wind up the mains cord and then fox the cord clip.
- Store the iron standing on its rear side to prevent damage soleplate.

Cleaning

- Before cleaning remove the mains plug from the wall socket the iron to cool down sufficiently.
- The appliance can be cleaned with a damp cloth.

NOTE : THE SOLEPLATE OF STEAM IRON MUST TO BE DRIED AFTER USE

UK PLUG REWIRING

Your appliance operates on 1400W-220-240V-50/60Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows:

IMPORTANT:


The wires in the mains lead are coloured in accordance with the following code:

BLUE : NEUTRAL (N)

BROWN : LIVE (L)

GREEN & YELLOW : EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

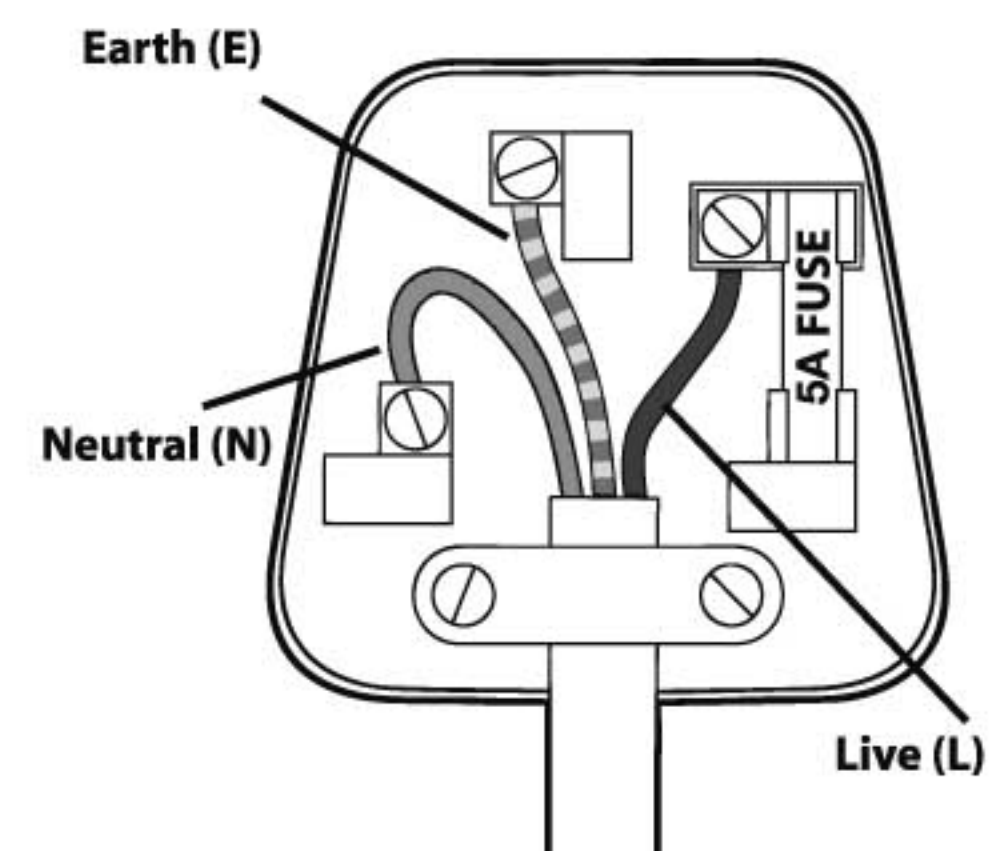

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter "N" or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter "L" or coloured RED.

The wire which is coloured GREEN & YELLOW must be connected to the terminal which is marked with the letter "E" or  or coloured GREEN.

DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

This appliance must be protected by a 5-amp fuse in a 5-amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS 1362 fuse.

**THIS IS NOT A TOY: KEEP THIS PRODUCT OUT OF REACH OF CHILDREN.
THIS APPLIANCE IS NOT INTENDED FOR USE BY CHILDREN.**

1400W TEFLON SOLEPLATE DRY IRON



31430c
elpine
A NAME YOU CAN TRUST!



Elpine B20 3BT UK

