

INSTRUCTION MANUAL

31424c
elpine[®]
A NAME YOU CAN TRUST!

2000W CERAMIC SOLEPLATE **STEAM IRON**



- Dry ironing/Spray ironing
- Burst of Steam • Variable steam ironing
- Ceramic coating sole plate
- Over heating protection • Indicator light
- Transparent water tank with beaker
- Self-cleaning function
- AC 220-240V 50/60Hz

RoHS ✓ **CE**




Elpine B20 3BT UK

Images are for illustrative purposes only,
actual product may vary.

GENERAL DESCRIPTION

- A. Sole plate
- B. Self-clean button
- C. Temperature control dial
- D. Water tank
- E. Indicator light
- F. Handle
- G. Cord cover
- H. Spray and Steam burst button
- I. Steam knob
- J. Water inlet cover
- K. Water spraying nozzle

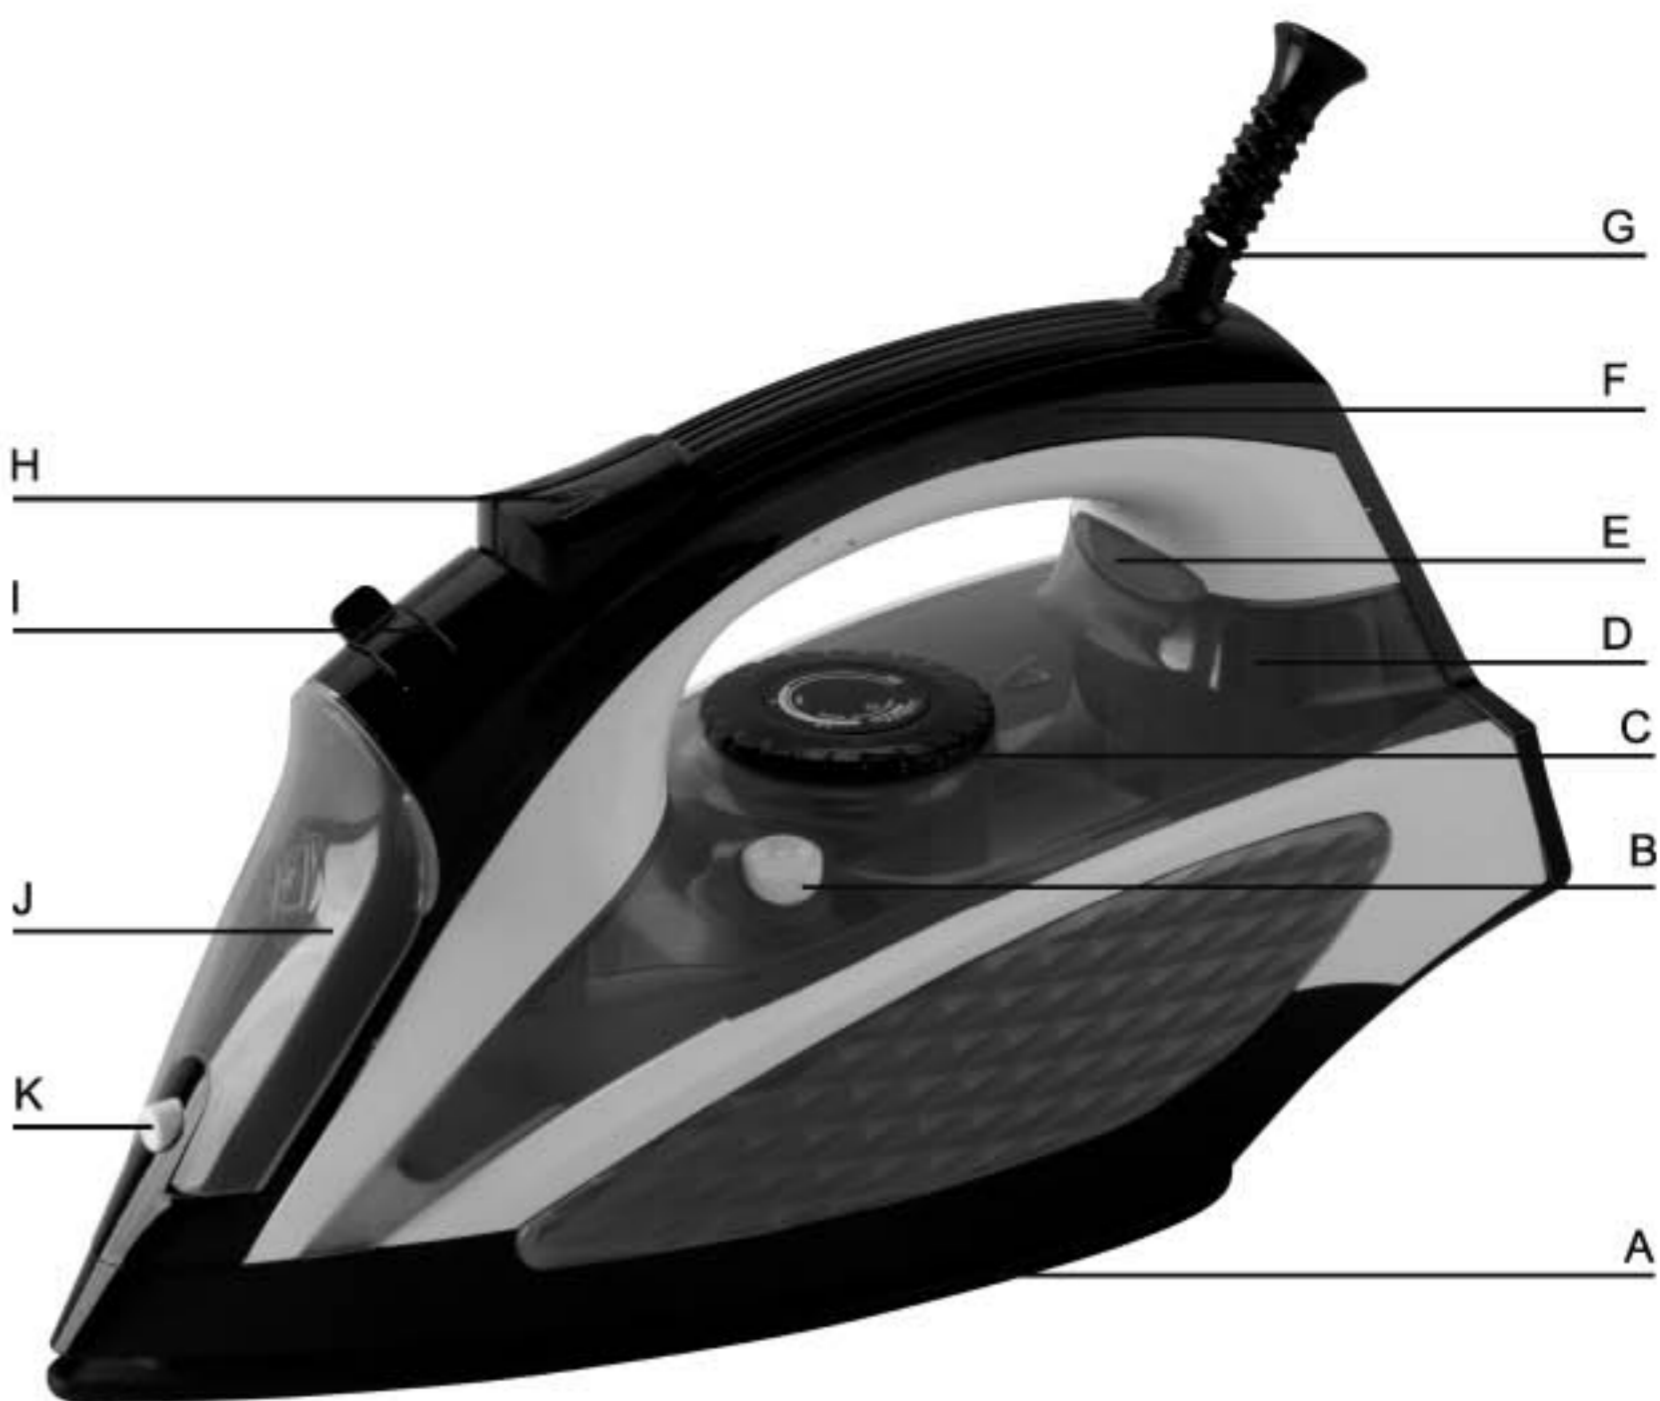

IMPORTANT

- Please read these instructions carefully before using the appliance.
- Before connecting the appliance, check if the voltage indicated on the rating plate corresponds with the mains voltage in your home.
- Do not use appliance for anything other than intended use.
- The iron should always be switched off before connecting or disconnecting from the power supply. Do not pull on the cord to disconnect the plug from the wall socket.
- If the power cord is damaged or defective, it must be replaced by an authorized service center to avoid a hazard.
- Unplug the iron from the mains electrical supply before:
 - Cleaning
 - Filling with water or emptying the water tank
 - Immediately after use
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not immerse the iron or the cord into water or any other liquid.
- Do not touch hot metal parts, hot water or steam. These parts become hot and may cause burns. Take care if you turn the iron upside downs: there may be hot water in the tank.
- The plug and cord should not be allowed to touch the hot sole plate. Let the iron cool down completely before taking it away. Roll the power cord around the iron for storage.
- Disconnect the iron from the wall outlet while filling with water or when emptying the water after use.
- To avoid an overloaded circuit, do not operate another high voltage appliance in the same electric circuit.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- The iron is for household use only.

FIRST USE

- Some parts of the iron have been slightly greased and it is normal for small amount of smoke to be produced the first time, this will quickly disappear.
- Before using for the first time remove any sticker or protective foil from the sole plate with a soft cloth.
- When using the steam function for the first time, do not direct the steam towards the laundry, as there could be debris from the steam vents.

FILLING WATER

- We recommend the use of distilled water.
- Make sure that both the steam control turning knob and temperature control dial are in 'OFF' position.
- Hold the iron upright so that the water-filling inlet is in a horizontal position.
- Fill with water through water filling Inlet until the water reach the 'MAX' mark indicated on the side of the iron, and never fill above this mark.

TEMPERATURE CONTROL SETTING

Follow the ironing instructions on the garment label. If there is no instruction but you do know the kind of fabric, please check the following table:

Note: If the fabric consists of various kinds of fabrics, always select the temperature required by the most delicate fabrics.

TEMPERATURE CONTROL	KIND OF TEXTILE	TEMPERATURE REQUIREMENT
MIN	Synthetics	Low Temperature
•	Silk	Normal Temperature
• •	Wool	Normal Temperature
• • •	Cotton, Linen	Normal and High Temperature
MAX	Linen	High Temperature

STEAM IRONING

- Place the iron in a vertical position and set the temperature control dial at the minimum/low heat setting.
- Insert the plug into the socket, and then turn the temperature control dial to the 'high heat' marking. The pilot light will come on, indicating that the iron is heating up.
- When the pilot light turns off, the set temperature has been reached and the iron is ready to use.
- During ironing, the pilot light on the iron automatically switches on/off as the thermostat maintains the set temperature (you may continue ironing during this process).
- Turn the steam control turning knob to the required position.
- Steam is produced as soon as the iron is held horizontally.

SPRAYING

Press the spray button to spray water on clothes, as often as required.

Note: When using the water spray function, ensure that there is enough water in the water tank, and you may have to pump the spray button several times at first time you use the iron in order to start the spraying function.

BURST OF STEAM

- Press the burst of Steam button to generate a powerful burst of steam that can penetrate the fabrics and smooth the most difficult and tough creases. Wait for a few seconds before pressing again.
- By pressing the Burst of Steam Button at intervals you can also iron vertically (curtain, hung garments, etc.)

Note: The burst steam function can only be used at high temperature. Stop the emission when the pilot light turns on, and then start ironing again only after the pilot light has turned off.

DRY IRONING

For ironing without steam, follow the instruction in section 'steam ironing', however, the steam control turning knob should remain in position 'OFF' (no steam).

CARE AND CLEANING

- After using, lift the iron with the filling hole downwards to empty the remaining water from the Water tank.
- Insert the plug into the socket, and set the temperature control dial to 'MAX' for 1-2 minutes to evaporate the remaining water, and then unplug the iron and let it cool down before storing it.

SELF-CLEAN FUNCTION

You can use the self-clean function to remove scale and impurities.

Use the self-clean function once every two weeks. If have water in your area is very hard, the self-clean function should be used more frequently.

1. Make sure the appliance is unplugged.
2. Set the steam control knob to position '0'
3. Fill the water tank to maximum level.
4. Select the maximum ironing temperature.
5. Put the plug in the wall socket.
6. Unplug the iron when the amber temperature pilot light has gone out.
7. Hold the iron over the sink, press and hold the self-clean button and gently shake the iron and fro. (Steam and billing water will come out of the soleplate. Impurities and flakes (if any) will be flushed out.)
8. Release the self-clean button as soon as all water in the tank had been used up. Repeat the self-clean process if the iron still contains a lot of impurities.

TROUBLE SHOOTING

PROBLEM	CAUSES	SOLUTION
No Steam	<ul style="list-style-type: none"> Temperature control dial is not pointing at the steam function There is no water in the water tank 	<ul style="list-style-type: none"> Set the temperature control dial to steam function Fill water in the water tank
Dripping	<ul style="list-style-type: none"> Temperature control dial is not pointing at the steam function Sole plate has not reached the temperature required 	<ul style="list-style-type: none"> Set the temperature control dial to steam function Turn up the temperature
No Heat	<ul style="list-style-type: none"> Sole plate has not reached the temperature required Power cut or fuse wire cut off 	<ul style="list-style-type: none"> Turn up the temperature Change fuse wire and stop using
Less Steam	<ul style="list-style-type: none"> Steam hole is blocked by dirt Temperature control dial is not pointing at the steam function 	<ul style="list-style-type: none"> Clean dirt with distilled water Set the temperature control dial to steam function
Too much heat	<ul style="list-style-type: none"> The position of the temperature control dial is not right 	<ul style="list-style-type: none"> Reduce the temperature and adjust the temperature control dial to low

UK PLUG REWIRING

Your appliance operates on 2000W-220-240V-50/60Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows:

IMPORTANT:


The wires in the mains lead are coloured in accordance with the following code:

BLUE : NEUTRAL (N)

BROWN : LIVE (L)

GREEN & YELLOW : EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

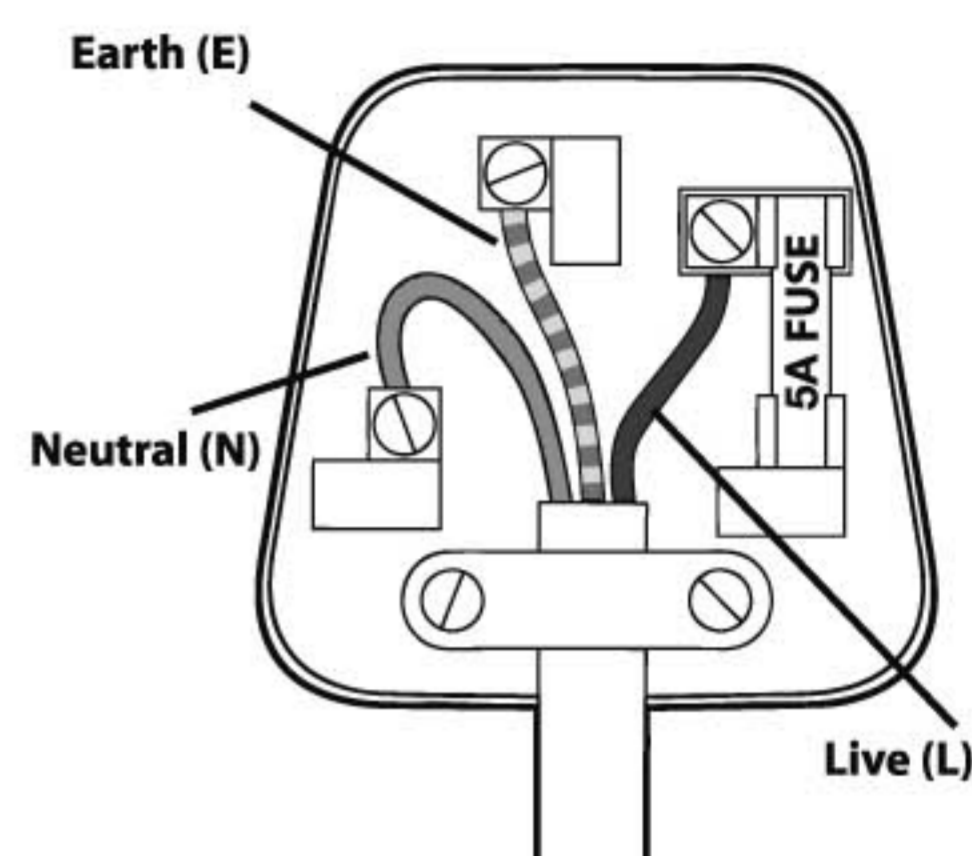

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter “N” or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter “L” or coloured RED.

The wire which is coloured GREEN & YELLOW must be connected to the terminal which is marked with the letter “E” or  or coloured GREEN.

DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

This appliance must be protected by a 5-amp fuse in a 5-amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS 1362 fuse.

**THIS IS NOT A TOY: KEEP THIS PRODUCT OUT OF REACH OF CHILDREN.
THIS APPLIANCE IS NOT INTENDED FOR USE BY CHILDREN.**

2000W CERAMIC SOLEPLATE STEAM IRON



31424c
elpine
A NAME YOU CAN TRUST!



Elpine B20 3BT UK

