

INSTRUCTION MANUAL

Read all the instruction carefully before you use the appliance and keep it for future use.

31381c
elpine
A NAME YOU CAN TRUST!

AIR COOLER WITH REMOTE CONTROL



- Water cooling or ice cooling system
- 7.5 hours timer
- 3-position wind speed selection
- 90 degree winding
- Cooling, humidifying
- Water tank capacity: 10L
- Remote control function
- Rated power: 60W



5 038673 313818

ELPINE B20 3BT UK 03/15



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed. To reduce the risk of fire, electrical shock or injury, please read and understand all instructions before using the spotlight.


SAFETY PRECAUTIONS

- Never insert fingers, pencils or any other items through the shutters when the unit is switched on.
- Never leave the air cooler unattended while it is in use. Always turn the product to the OFF position and unplug it when not in use, when moving the air cooler from one location to another or when cleaning it.
- Always ensure that the air cooler is placed on a flat, dry and stable surface.
- Do not plug/unplug the appliance into/from the electrical outlet or adjust any switches with wet hands.
- Ensure that the appliance has been properly earthed before use.
- Ensure that the air cooler is switched off from the supply mains before removing the shutters.
- Take care to prevent liquid and objects from entering the appliance through openings.
- Never use the appliance in areas where it can come into contact with water. Never handle the appliance if it was dropped into water or any other liquid. Disconnect the appliance from the outlet and take it to a qualified technician for assessment of damage or repairs.
- Never place the appliance or power cord on or close to sources of heat.
- To unplug, grip the plug and remove it directly from the wall socket. Never disconnect by pulling the appliance's cord. Never carry the appliance by its cord. Never wrap the cord around the appliance.
- Do not run the cord under carpeting and do not cover the cord with throw rugs, runners or the like. Arrange cord away from traffic area and where it will not be tripped over.
- To prevent a possible fire hazard, do not block air intakes or outlets in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- Make sure that the voltage indicated on the appliance corresponds with the mains voltage in your home. Connect the appliance to single-phase AC supply of the voltage specified on the rating plate.
- This appliance is designed for home use only and may not be used outdoors, or for commercial or industrial purposes.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Extreme caution must be exercised.
- Children should be supervised to ensure that they do not play with this appliance. Packaging must never be left within reach of children since it is potentially dangerous.
- Never use the appliance if the power cord or plug is damaged. If the appliance, cord or plug is damaged through any means, do not open the appliance and do not attempt to repair it yourself. Take it to a qualified technician for replacement or repairs.
- Avoid the use of an extension cord as this may overheat and cause a risk of fire.

Overview



- | | |
|---------------------------|---------------------------|
| 1. Control Panel & Sensor | 8. Carry Handle |
| 2. Horizontal Shutters | 9. Ice Case |
| 3. Vertical Shutters | 10. Cold Pack |
| 4. Front | 11. Remote Control |
| 5. Water-tank Indicator | 12. Indicator Light |
| 6. Water-tank Opening | 13. Timer Indicator Light |
| 7. Castor wheels | |

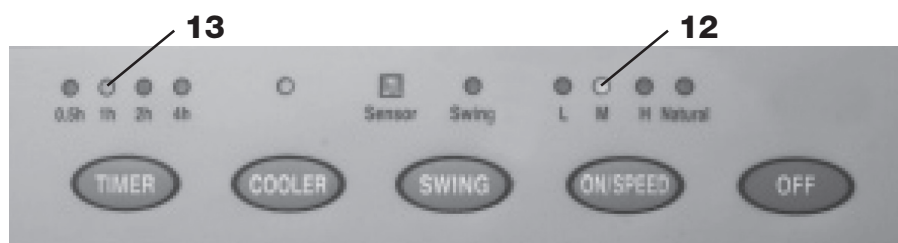

12. Indicator Light

13. Timer Indicator Light

Operation

The Indicator Light will be switched on once the unit is connected to the main power supply. To turn on the air cooler, press the ON/ Speed Switch. Press "OFF" to switch off.

Wind speed (fan)

1. Low 2. Medium 3. High 4. Low in Natural

Timer Timer Indicator Light – 0.5 hr, 1 hr, 2 hrs & 4 hrs

Timer set up:

- The Timer can be set by pressing the Timer Button once.
- The Timer can be preset to 7.5 hours maximum. The power will be cut off after it has reached the preset time.

Swing (oscillation)

Press the Swing Button once to turn on the Oscillation Function and press again to switch it off. Vertical oscillation can be adjusted manually by adjusting the Vertical Shutters.

Operation

1. Open the packaging and take out all the parts before operating the unit.
2. Open the Water Tank Cover and pour in ice and clean water. Open the Ice Case and put the ice into the Tank. Do not fill the Water Tank with more than the "MAX" level indicated.
3. Install the air cooler horizontally and remember to ensure that the power source matches the power rating plate.
4. Plug in the appliance and make sure that the power is in the OFF position.
5. When the power of the air cooler is on, the preset wind speed will be medium. Select the wind speed (LOW/ MEDIUM/ HIGH/ LOW & NATURAL) by pressing the ON/ Speed Button.
6. Set the Timer by pressing the Timer Button once. The 0.5 hour (30 minutes) time, is the minimum time to be set, and 7.5 hours is the maximum time to be set.
7. Select the wind oscillation by pressing the Swing Button. Vertical oscillation can be manually adjusted by adjusting the Vertical Shutters.
8. For the Humidifier Function, put the Cold-packs into a refrigerator until they are frozen. Put the Cold-pack into the Water Tank. After 5 minutes, the water temperature will drop. The air cooler will also begin to humidify the air.
9. Remote Control: Open the Back Cover and install a battery (included). The keys and functions of the Remote Control are the same as the Control Panel. When using the Remote Control, please point the Remote Control towards the Sensor on the Control Panel and make sure that there is no barrier in between.

Care and Maintenance

- Use a standard AC outlet 230 V ~ 50 Hz.
- Please ensure that the air cooler is switched off and unplugged before you pour water or ice into the water component. Please do not put any water on the electric parts as this may cause a hazard.
- Switch off the power and unplug the air cooler before cleaning. Only the casing of the appliance should be cleaned with a damp cloth.
- Never let the Water Tank overflow.
- Do not place any objects on the louvre.
- Two bottles (Cool-Packs) are included with the unit. Please fill the bottle with water, place in your refrigerator for twelve hours and once they are frozen, they may be used to provide an even more cooling effect.

Service

1. Hints before returning the appliance:
2. Check that your household socket is working properly.
3. Check that all required switches are in the ON position.
4. Ensure that the plug is firmly placed in the socket and switched on.

Specifications

220-240 V ~ 50 Hz 60 W

4 Speed settings



UK PLUG REWIRING

Your appliance operates on 220-240V-50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows:

IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE : NEUTRAL (N)

BROWN : LIVE (L)

GREEN & YELLOW : EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:


The wire which is coloured BLUE must be connected to the terminal which is marked with the letter "N" or coloured BLACK.


The wire which is coloured BROWN must be connected to the terminal which is marked with the letter "L" or coloured RED.

The wire which is coloured GREEN & YELLOW must be connected to the terminal which is marked with the letter "E" or  or coloured GREEN.

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

This appliance must be protected by a 13-amp fuse in a 13-amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS 1362 fuse.

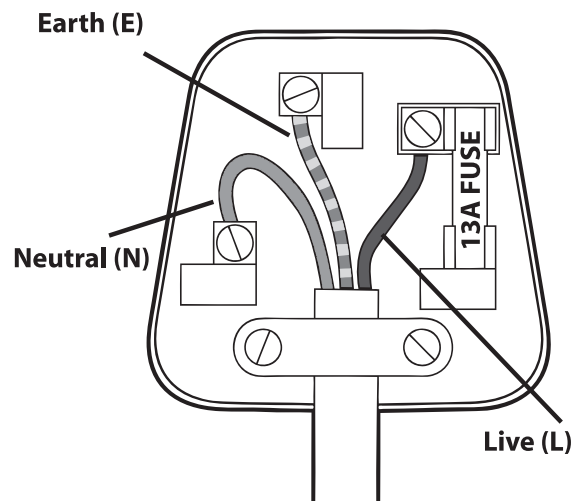

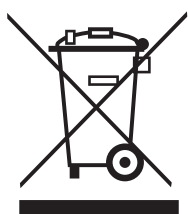

CORRECT DISPOSAL OF THIS PRODUCT

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

AIR COOLER WITH REMOTE CONTROL



5 038673 313818

elpine
A NAME YOU CAN TRUST!

Elpine B20 3BT UK