## **INSTRUCTION** MANUAL



# MULTI BLENDER





- 1 X High Torque Power Base
- 1 X Stainless Steel Flat Blade
- 1 X Stainless Steel Cross Blade
- 1 X Tall Cup
- 1 X Short Cup
- **4 X Party Cups**
- **4 X Coloured Rings for Party Mugs**
- 2 X Resealable Storage Lids
- 1 X Shaker I Steamer Top
- 1 X Blender with Juice Extractor

WHIPS: Cream Soft Cheese Butter

**GRINDS:** Coffee Rock Salt Nuts

**BLENDS:** Milkshakes Smoothies Soups

**PUREES:** Sauces Soups Baby Food

**CHOPS:** Onions Garlic Carrots

**MIXES:** Pesto Dips Dough

JUICES: Orange Carrot Grapefruit

**GRATES:** Cheese Chocolate Bread Crumbs

RoHS√ (€









Your appliance operates on 220-240V-SOHz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows:

### **IMPORTANT:**

 
The wires in the mains lead are coloured in accordance with the following code:

**BLUE: NEUTRAL (N)** 

BROWN: LIVE (L)

**GREEN &YELLOW: EARTH (E)** 

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in you plug, proceed as follows:




The wire which is coloured BROWN must be connected to the terminal which is marked with the letter "L or coloured RED.

The wire which is coloured GREEN & YELLOW must be connected to the terminal which is marked with the letter "E" or 🕒 or coloured GREEN.

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are lightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

This appliance must be protected by a 13-amp fuse in a 13-amp type (BS1363) plug. Should you need to replace lhe fuse, use only an ASTA approved BS 1362 fuse.

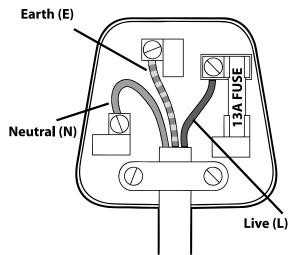

#### **WARNINGS:**

- 1. This appliance is not intended for prolonged operation.
- 2. This appliance must not operate when there's nothing in the jar.
- 3. Do not touch the blade when appliance in service.
- 4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 5. The appliance should be repaired by electrically qualified professionals.
- 6. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

#### **CORRECT DISPOSAL OF THIS PRODUCT**



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.







