

31366c

elpine®
A NAME YOU CAN TRUST!

 
Halogen Heater

**WITH
REMOTE
CONTROL**

- Cool touch cabinet
- Instant, powerful, efficient halogen heating
- 3 heat setting
400/800/1200
- Safety tip-over switch and thermal fuse
- Wide-angle Oscillation function
- Slim line, compact, lightweight construction
- High temperature resistant plastic housing



ELPINE B20 3BT UK
09/13

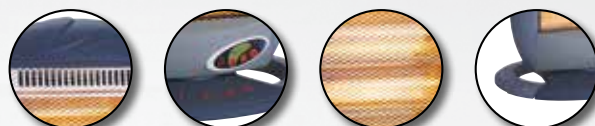

USER INSTRUCTIONS Read all the instruction carefully before you use the appliance and keep it for future use.

DO NOT TURN Heater UPSIDE-DOWN DURING OPERATION

 
CAUTION

- Remove the packing and make sure that the appliance is intact. In case of doubt do not use the appliance and contact our after-sales service. Do not leave packaging materials like bags and staples within reach of children.
- Before switching on appliance check if the electrical voltage and frequency of the circuit correspond to those indicated on the appliance.
- The appliance has to be connected to a circuit according to the rules in force concerning the national grid. The circuit has to be related to the nominal power of the appliance and has to be provided with an earth –wire.
- Use the appliance only for the mentioned purpose, namely as a heater for domestic use. Do not use it for any other application as it could get dangerous.
- The manufacturer is not responsible for any eventual damages caused by improper or faulty use.
- The use of every electrical appliance calls for the awareness of some basic rules, such as:
- Never touch the appliance with wet or damp hands or feet.
- Never expose the appliance to atmospheric conditions (rain, sun, etc.)
- The appliance must be always placed on a flat and stable surface.
- Switch the appliance off and unplug it before cleaning.
- When the appliance is not in use switch it off and unplug it. Remove the heater from any area that children are likely to play.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not put the cable on the appliance when it still warm.
- A correct operation of the appliance is obtained when the Heater is installed vertically. Do not switch on the heater near pieces of furniture, curtains, shelves, etc.
- Do not use the appliance near liquids or inflammable matters.
- The appliance must not be located immediately below a socket outlet.
- In order to avoid overheating, do not cover the heater
- In case the power cord is damaged, send it to the nearest after sale service recommended by the manufacturer for the replacement.
- This appliance is not intended use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not connect the appliance to extension cords or multiple outlets.
- Do not damage and do not kink the power cord.

- Before cleaning the appliance or carrying out any maintenance switch off the whole system.
- If the appliance fails to work, switch it off. Do not attempt to repair. If any repair is required please contact the after-sale centers approved by the manufacturer or an electrically qualified technician. Ask for original replacement parts, otherwise safety of the appliance can be compromised.
- Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Caution: This heater is not fitted with an automatic thermostat. Do not install the heater near the curtains and flammable materials.

COMPONENTS

- 1- Body frame
- 2- Base plate
- 3- Butterfly nut(2pcs)
- 4- Tip-over safety switch rod
- 5- Power cord guide
- 6- Power cord

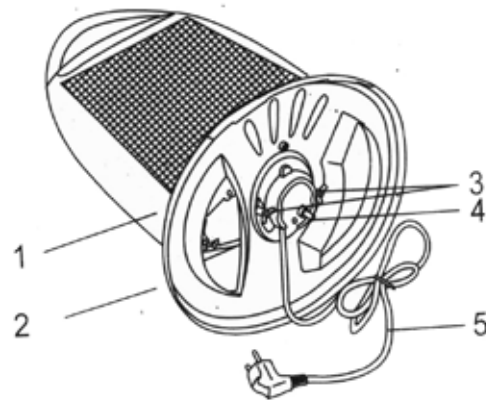

ASSEMBLY

Assemble the body frame and the base plate together as the following sequences

- Remove the butterfly nuts from the lower part of the body frame.
- Insert the power cord through the slot placed in the middle part of the basement and then assemble the body frame to the base plate.
- Secure the body frame to the base plate by means of the two butterfly nuts previously removed. Insert the power cord through the suitable slots and then fix it by the clamp.

OPERATION

Plug in the appliance. Check that the outlet has at least a 10AMPERAGE current carrying capacity.

MODELS WITH SWITCHES

Select the speed by suitable switches. Press the oscillating switch to make the Heater oscillate. Press it again to switch off the oscillating movement of the appliance.

The Heater can be activated manually by pressing the handle situated in the rear part of the appliance.

SAFETY DEVICE

This appliance is provided with safety devices disconnects the appliance when the Heater is tilted or when is tipped by means of a switch situated in the lower part of the Heater.

MAINTENANCE

The appliance needs only an external regular cleaning. After use and before cleaning always unplug the appliance and wait till the item is cool. Clear the dust from the grills. Do not clean the painted parts with emery flour or solvents and use only a moistened cloth.

TECHNICAL DATA

Voltage: 220-240VAC 50Hz

Power consumption: 1200W (400+400+400)

 
Dimensions: 350*165*570mm

Weight: 2.8 kg

WARNINGS

- Do not use the heater to dry your laundry. Never obstruct the intake and outlet grills (danger of overheating).
- The heater must be positioned at least 100cm from furniture or other objects.
- Do not move this appliance while it is functioning, may result in overheating, or risk of fire.
- The heater is fitted with a safety device, which will switch off the heater in case of accidental overheating (e.g. obstruction of air intake and outlet grills, motor turning slowly or not at all). To reset, disconnect the plug from the power for a few minutes, remove the cause of overheating then plug the appliance in again.
- Children should be supervised to ensure that they do not play with the appliance.
- Caution: Do not cover anything on your heater when in use.
- The heater must not be placed near a wall socket.
- This heater must not be used near a bath, shower or swimming-pool.
- Cleaning and user maintenance shall not made by children without supervision.
- This appliance is not intended for use by children and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

CORRECT DISPOSAL OF THIS PRODUCT

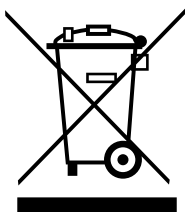

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

UK PLUG REWIRING

Your appliance operates on 220-240V-50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows:

IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE : NEUTRAL (N)

BROWN : LIVE (L)

GREEN & YELLOW : EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in you plug, proceed as follows:

 
The wire which is coloured BLUE must be connected to the terminal which is marked with the letter "N" or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter "L" or coloured RED.

The wire which is coloured GREEN & YELLOW must be connected to the terminal which is marked with the letter "E" or  or coloured GREEN.

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are lightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

This appliance must be protected by a 13-amp fuse in a 13-amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS 1362 fuse.

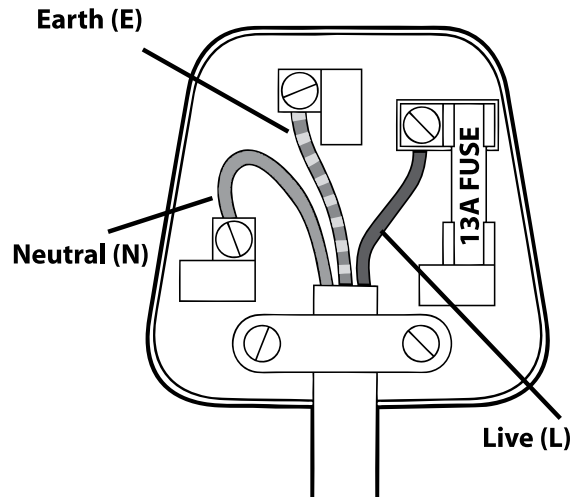

HALOGEN HEATER 1200W



elpine
A NAME YOU CAN TRUST!

Elpine B20 3BT UK