

# INSTRUCTION MANUAL

31362c  
**elpine**<sup>®</sup>  
A NAME YOU CAN TRUST!

## 2 SLICE SANDWICH TOSTER



- 220-240v 50Hz 750w
- Non-stick coating plates
- Heat insulated handle
- Mains Power Indicator
- Temperature ready indicator
- Easy to clean
- Locking system  
thermostatically controlled

**750  
WATTS**



Elpine B20 3BT UK

## **BEFORE OPERATING THIS UNIT, PLEASE READ THESE INSTRUCTIONS COMPLETELY.**

- Before connecting the appliance ensure that the voltage indication the underside of the appliance corresponds with the mains voltage in your home.
- Connect the appliance to an earthed wall socket
- Position the appliance so that: -the power cord is not hanging over the edge of the table or sink; -it is standing on a flat surface with sufficient free space around it.
- Never put the power cord near to or in contact with the hot surface of the appliance.
- Always preheat the cooking plate before starting to cook.
- Unplug the appliance after use.
- Avoid touching the metal parts as they become very hot.
- Never use sharp or abrasive items in contact with the cooking plate as this will damage the nonstick surface.
- Always clean the appliance after use First unplug and allow the appliance to cool down. Never immerse the appliance into water. Avoid water running into the appliance.
- If the mains cord of this appliance is damaged, it must only be replaced by their service representative, as special tools and/or parts are required.
- This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.

## **SAVE THESE INSTRUCTIONS**

### **BEFORE FIRST USE**

- Clean the baking plates with a damp cloth or sponge.
- Slightly grease the baking plates with a little butter or cooking oil.
- Plug in the sandwich maker and heat up the plates until the green Ready to cook pilot light goes off. The sandwich maker is ready for use

Note: when using this sandwich maker for the first time, a fine smoke haze may result. This is normal because of the initial heating of the internal components.

### Making toasted sandwich

- Put the mains plug into the wall socket. The red power light and green power light will both illuminate to show that the sandwich maker is heating.
- Prepare the bread and filling for your sandwich while sandwich maker is pre-heating.
- Wait until the green on pilot light gets off. , the sandwich maker is then at the correct temperature for use.
- To obtain an even golden brown result, you can slightly butter the side of the bread in contact with the plate.
- Lay the slices of bread with the buttered side on the lower cooking plate, place your filling and cover with the second slices of bread with buttered side up. You can toast only one sandwich if you wish. For optimal result, fillings should be placed well within the sandwich slices.
- Lower the upper cooking plate carefully onto the bread until the sandwich maker is tightly clamped.

- Open the sandwich maker after 2-3 minutes and check whether the toasted sandwich is sufficiently 'brown'. The cooking time required to obtain crisp brown sandwiches depends on the type of bread, fillings and your personal taste.
- Use a non-metallic utensil (e.g. Wooden spatula) to remove the toasted sandwich maker. Do not use sharp or abrasive kitchen utensils.
- Unplug the sandwich maker from the wall socket after use.

Note: During cooking, the green ready to cook pilot light cycles on and off to maintain the appliance at the correct temperature.

## AFTER USE HOW TO CLEANING

1. Never use aggressive or abrasive cleaning agents and materials, as this damages the non-sticker coating of the plates.
2. Unplug the appliance.
3. Let the appliance cool down properly in open position.
4. First remove excess oil from the plates with a piece of kitchen paper before you clean them.
5. Use a wooden or plastic spatula to remove stick food residues (for example solidified cheese) from the cooking plates.
6. Do not use metal, sharp or abrasive utensils.
7. Clean the cooking plates with a moist soft cloth or sponge.
8. Clean the outside of the appliance with a moist cloth.


## NEVER IMMERSE THE APPLIANCE INTO WATER

- THE APPLIANCE CAN BE STORED IN A VERTICAL POSITION

OPERATING VOLTAGE: 220-240V ~50HZ


POWER : 700W-750W

## CORRECT DISPOSAL OF THIS PRODUCT

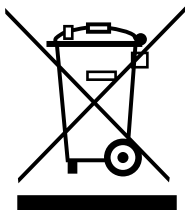

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

31362c  
**elpine**<sup>®</sup>  
 A NAME YOU CAN TRUST!

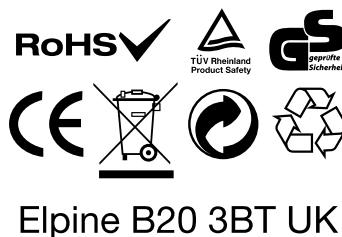

# 2 SLICE SANDWICH TOSTER

# **UK PLUG REWIRING**

Your appliance operates on 220-240V-50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows:

## **IMPORTANT:**

The wires in the mains lead are coloured in accordance with the following code:

BLUE : NEUTRAL (N)

BROWN : LIVE (L)

GREEN & YELLOW : EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter "N" or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter "L" or coloured RED.

The wire which is coloured GREEN & YELLOW must be connected to the terminal which is marked with the letter "E" or  or coloured GREEN.

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

This appliance must be protected by a 13-amp fuse in a 13-amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS 1362 fuse.

