

INSTRUCTION MANUAL

elpine®
A NAME YOU CAN TRUST!

4 SLICE TOASTER

**1300
WATTS**



- 20-240v 50Hz 1300w
- 4- Slice cool touch toaster
- 7 level browning control
- Stop function
- Cool Touch Housing
- Automatically pop up
- Reheat cancel and defrost function
- Slide out crumb tray
- With Detached bun warmer

31360c



5 038673 313603

31361c



5 038673 313610



BEFORE OPERATING THIS UNIT, PLEASE READ THESE INSTRUCTIONS COMPLETELY.

- Before connecting the appliance ensure that the voltage indication the underside of the appliance corresponds with the mains voltage in your home.
- Connect the appliance to an earthed wall socket
- Position the appliance so that: -the power cord is not hanging over the edge of the table or sink; -it is standing on a flat surface with sufficient free space around it.
- Never put the power cord near to or in contact with the hot surface of the appliance.
- Always preheat the cooking plate before starting to cook.
- Unplug the appliance after use.
- Avoid touching the metal parts as they become very hot.
- Always clean the appliance after use. First unplug and allow the appliance to cool down. Never immerse the appliance into water. Avoid water running into the appliance.
- If the mains cord of this appliance is damaged, it must only be replaced by their service representative, as special tools and/or parts are required.
- This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.

FEATURES

1. Start Control
2. Stop and automatically eject button: STOP
3. Toasting setting knob
4. Bread insert slot
5. Crumb tray



SAVE THESE INSTRUCTIONS

BEFORE FIRST USE

CLEANING YOUR TOASTER To clean your toaster, first remove the plug from the mains outlet, then open crumb tray at bottom of toaster. Clean the toaster with a soft, dry cloth and wipe dry afterwards, never use water.

Check that the voltage of the appliance corresponds to the mains voltage and plug in. This appliance is fitted with an earth wire for extra safety.

SELECTING THE BROWNING LEVEL

Select the setting of your choice from the possible browning levels. The degree of browning increases in relation to the numbers on the selection dial.

HOW TO USE YOUR TOASTER

Place the bread in the toaster and push the lever down until it automatically locks into place.

TO STOP THE TOASTER

The toaster is automatically released when the previously selected browning levels. If you want to interrupt the toasting process at any time, just push the "STOP" button and the lever button will return to its original position.

IMPORTANT SAFEGUARDS - WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED INCLUDING THE FOLLOWING.


1. Do not touch hot surfaces. Use Handles or knobs.
2. To protect against electrical shock. Do not immerse cord plug or appliance in water or other liquid. Do not put hand in side of product when working
3. Close supervision is necessary when appliance is used near children.
4. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off accessories.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliances to factory for examination repair or adjustment.
6. Do not use outdoors. This appliance is for household use only.
7. Do not let cord hang over edge of table or counter, or touch hot surfaces.
8. Do not place on or near gas or electric burner, or in a heated oven.
9. Toasting Lever must be in the "Up" position before attaching or disconnecting the plug from wall outlet.
10. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
11. A fire may occur if toaster is covered or touching flammable material, including curtains, draperies when in operation.
12. Do not attempt to dislodge food when toaster is plugged in.
13. The bread may burn therefore do not use the toaster near or below combustible material, such as curtains.
14. The temperature of accessible surfaces may be high when the appliance is operating.
15. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
16. This appliance is not intended for use by children or other persons without assistance or supervision if their physical, sensory or mental capabilities prevent them from using it safely. Children should be supervised to ensure that they do not play with the appliance.

NEVER IMMERSE THE APPLIANCE INTO WATER

- THE APPLIANCE CAN BE STORED IN A VERTICAL POSITION


OPERATING VOLTAGE: 220-240V ~50HZ POWER : 700W-750W

CORRECT DISPOSAL OF THIS PRODUCT

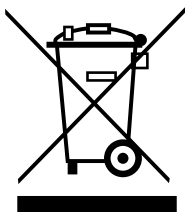

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

4 SLICE TOASTER

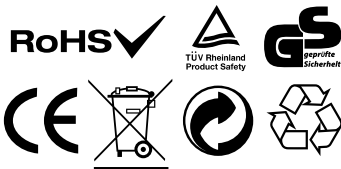

31360c



5 038673 313603

31361c



5 038673 313610

elpine
A NAME YOU CAN TRUST!

Elpine B20 3BT UK

UK PLUG REWIRING

Your appliance operates on 220-240V-50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows:

IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE : NEUTRAL (N)

BROWN : LIVE (L)

GREEN & YELLOW : EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter "N" or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter "L" or coloured RED.

The wire which is coloured GREEN & YELLOW must be connected to the terminal which is marked with the letter "E" or  or coloured GREEN.

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

This appliance must be protected by a 13-amp fuse in a 13-amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS 1362 fuse.

