

# Halogen Heater

## 400/800/1200


- Cool touch cabinet
- Instant, powerful, efficient halogen heating
- 4 heat setting 400/800/1200
- Safety tip-over switch and thermal fuse
- Wide-angle Oscillation function
- Slim line, compact, lightweight construction
- High temperature resistant plastic housing



RoHS ✓ CE GS TÜV Rheinland Product Safety



Elpine B20 3BT

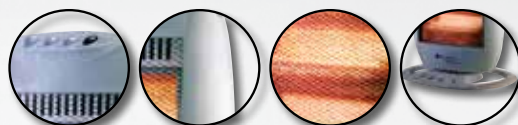

## **PRODUCT USE, CARE AND SERVICE WARRANTY INSTRUCTIONS**

### **READ AND SAVE THESE INSTRUCTIONS**

### **DO NOT TURN HEATERS UPSIDE-DOWN DURING OPERATION**

#### **Dear Customer,**

We thank you very much for having purchased one product of ours. We kindly ask you to read and save this instruction manual.

#### **CAUTION**

- Remove the packing and make sure that the appliance is intact. In case of doubt do not use the appliance and contact our after-sales service. Do not leave packaging materials like bags and staples within reach of children.
- Before switching on appliance check if the electrical voltage and frequency of the circuit correspond to those indicated on the appliance.
- The appliance has to be connected to a circuit according to the rules in force concerning the civil plant. The plant has to be related to the nominal power of the appliance and has to be provided with an earth-wire.
- Use the appliance only for the mentioned purpose, namely as a heater for domestic use. Do not use it for any other application as it could get dangerous.
- The manufacturer is not responsible for any eventual damages caused by improper or faulty use.
- The use of every electrical appliance calls for the awareness of some basic rules, such as:
  - never touch the appliance with wet or damp hands or feet.
  - never expose the appliance to atmospheric conditions (rain, sun, etc.).
- The appliance must be always placed on a flat and stable surface.
- Switch the appliance off and unplug it before cleaning.
- When the appliance is not in use switch it off and unplug it.
- Do not use the heater in bathroom.
- Do not put the cable on the appliance when it is still warm.
- A correct operation of the appliance is obtained when the heater is installed vertically. Do not switch on the fan heater near pieces of furniture, curtains, shelves, etc.
- Do not use the appliance near liquids or inflammable matters.
- Never operate the appliance immediately below an outlet.

**ATTENTION:** Do not connect the appliance to a device switching the appliance automatically on such as a thermal control device or a time switch to avoid overheating.

- Do not cover the appliance when it is running to avoid overheating risks.
- In case the power cord is damaged send it to the nearest after sale service recommended by the manufacturer for the replacement.

- Children, old people and disabled people are not often aware of the dangers, which can derive from improper use of the appliance. The appliance should never be used without an adult supervision.
- Do not connect the appliance to extension cords or multiple outlets.
- Do not damage and do not kink the power cord.
- Before cleaning the appliance or carrying out any maintenance unplug from the mains.

If any repair is required please contact only the after-sale centres approved by the manufacturer and ask for original spare parts. Otherwise safety of the appliance can be compromised.

## **COMPONENTS**

- 1- Body frame
- 2- Base plate
- 3- Screw (2pcs)
- 4- Tip-over safety switch rod
- 5- Power cord
- 6- Switch

## **ASSEMBLY**

Assemble the body frame and the base plate together as the following sequences.

Remove the screws from the lower part of the body frame.

Insert the power cord through the slot placed in the middle part of the base and then assemble the body frame to the base plate.

Secure the body frame to the base plate by means of the two butterfly nuts previously removed. Insert the power cord through the suitable slots and then fix it by the clamp.

## **OPERATION**

Plug in the appliance. Check that the outlet has at least a 10 AMPERE current carrying capacity.

### **Models with switches**

Select the speed by suitable switches. Press the oscillating switch to make the heater oscillate. Press it again to switch off the oscillating movement of the appliance.

## **SAFETY DEVICE**

This appliance is provided with two safety devices: the first device disconnects the appliance when the heater is tilted or when is tipped by means of a switch situated in the lower part of the heater. The second safety device disconnects the appliance in case of overheating by means of a thermo fuse.

## MAINTENANCE

The appliance needs only an external regular clean.

After use and before cleaning always unplug the appliance and wait till the item is cool.

Clean the dust from the grilles.

Do not clean the painted parts with abrasives or solvents and use only a moistened cloth.

## TECHNICAL DATA

Spec: 3 tubes

Voltage: 230V~ 50 Hz

Package: 32x12.5x53 cm

Power: 1200 W

N.W/G.W: 1.8/2.1kgs

31227c  
Elpine  
A NAME YOU CAN TRUST!

Halogen Heater 400/800/1200

