

# 2kw Compact Fan Heater

1000/2000w

- Super silent
- 2 Heat settings 1000w/2000w
- Cool blow
- Adjustable thermostat control
- Automatic safety cut-out
- Over heat protection
- Indicator light
- Variable thermostat
- Space saving alternative position:  
horizontal or vertical
- Integral carry handle

Suitable for:  
Use in a well ventilated area



Elpine B20 3BT



## **PRODUCT USE, CARE AND SAFETY INSTRUCTIONS**

### **READ AND SAVE THESE INSTRUCTIONS**

#### **FOR YOUR OWN SAFETY**

1. Read all instructions before using the fan heater.
2. Only connect the fan heater to a single-phase socket with a main voltage as specified on the rating plate.
3. This appliance meets the electromagnetic compatibility requirements specified in EN 55104/95 with regard to interference with radio and TV sets.
4. Do not leave home while the appliance is in use: ensure that the switch is in OFF ("O") position and the thermostat is in minimum position.
5. Keep combustible material such as furniture, cushions, bedding, paper, clothes, curtains etc. At least 100cm away from the fan heater.
6. Always unplug the heater when not in use. Do not pull the cord to unplug the heater.
7. Keep the air inlet and outlet free from objects: at least 100cm in front and 50cm behind the heater.
8. Do not install the heater right below a socket.
9. Do not let animals or children touch or play with the fan heater. Pay attention! The air outlet gets hot during operation (more than 80°, or 175F).
10. Do not cover. For risk of overheating.
11. Do not use the fan heater in the rooms with explosive gas or while using inflammable solvents, varnish or glue.
12. If the cord of this appliance is damaged discontinue use of this product and contact the manufacturer for further instructions.
13. Keep the fan heater clean. Do not allow any objects to enter any ventilation or exhaust opening as this may cause electric shock, or fire or damage to the heater.

#### **INSTALLATION**

The appliance requires no installation; it should be used solely as a portable appliance. Portable appliances are not suitable for use in a bathroom.

#### **OPERATION**

- Turn the thermostat knob (right) in a clockwise direction until it reaches the maximum setting.
- Summer service (ventilation only): turn the knob to setting ' \* '.
- Heating at reduced power: turn the knob (right) to setting '•' (1000W).
- Heating at full power: turn the knob (right) to setting '••' (2000W)
- Switching off: turn the knob (left) to setting 'O'

## REGULATING THE THERMOSTAT

When the room has reached the required temperature turn the right thermostat knob (where included) in an anti-clockwise direction up to the point where the appliance switches off and not beyond. The temperature fixed in this way will be automatically regulated and kept at a constant level by the thermostat.

 
## CLEANING AND MAINTENANCE

Before cleaning always remove the plug from the electrical socket. Clean the air inlet/outlet grilles frequently. Never use abrasive powders or solvents.

## WARNINGS

- Do not use the heater to dry your laundry. Never obstruct the intake and outlet grills (danger of overheating).
- The heater must be positioned at least 100cm from furniture or other objects.
- This appliance comes with a Y-type connection. Replacement of the feed cable can only be made by a technician authorized by the manufacturer, because such work requires special tools.
- Do not move this appliance while it is functioning, may result in overheating, or risk of fire.
- Do not use the appliance in rooms less than 4m<sup>2</sup> area.
- The heater is fitted with a safety device, which will switch off the heater in case of accidental overheating (e.g. obstruction of air intake and outlet grills, motor turning slowly or not at all). To reset, disconnect the plug from the power for a few minutes, remove the cause of overheating then plug the appliance in again.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Caution: Do not cover anything on your heater when in use.
- The fan-heater must not be placed near a wall socket.
- This fan-heater must not be used near a bath, shower or swimming-pool.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. children shall not play with the appliance.
- Cleaning and user maintenance shall not made by children without supervision.

## CORRECT DISPOSAL OF THIS PRODUCT

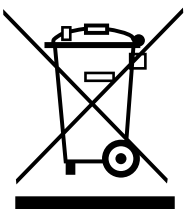

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



## UK PLUG REWIRING

Your appliance operates on 220-240V-50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows:

### IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE : NEUTRAL (N)

BROWN : LIVE (L)

GREEN & YELLOW : EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in you plug, proceed as follows:

 
The wire which is coloured BLUE must be connected to the terminal which is marked with the letter "N" or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter "L" or coloured RED.


The wire which is coloured GREEN & YELLOW must be connected to the terminal which is marked with the letter "E" or  or coloured GREEN.

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are lightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

This appliance must be protected by a 13-amp fuse in a 13-amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS 1362 fuse.

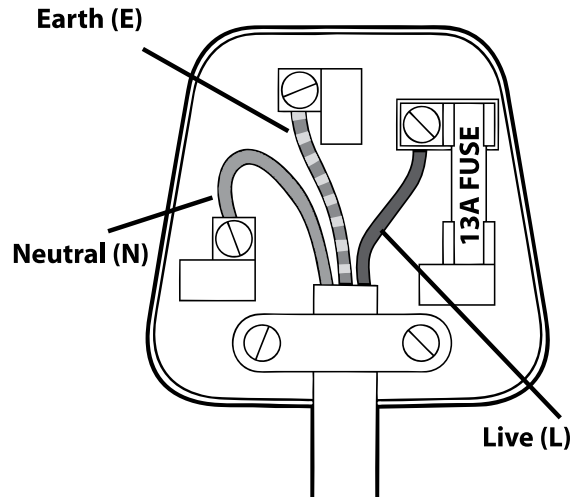

# ELECTRIC FAN HEATER 1000/2000W

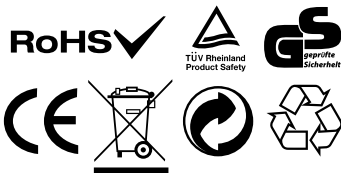 

**elpine**  
A NAME YOU CAN TRUST!

Elpine B20 3BT UK