

1000/2000w Electric Fan Heater

31110c
elpine
A NAME YOU CAN TRUST!

- Super silent
- Compact and lightweight design
- Carrying handle
- Portable fan heater
- Adjustable thermostat control
- Fan only setting
- Cool blow
- Indicator light
- Cord storage
- Over heat protection
- Safety thermal cut-out
- Dual heat settings
- 1000W/2000w
- 230V - 50hz 2000w



RoHS ✓ CE GS TÜV Rheinland Product Safety



5 038673 311104

Elpine B20 3BT



USER INSTRUCTIONS

Read all the instruction carefully before you use the appliance and keep it for future use.

DO NOT TURN RADIATORS UPSIDE-DOWN DURING OPERATION

PREPARATION BEFORE OPERATING

1. Check if the electrical voltage of the main supply and the load of the socket match the rated voltage and power marked on the rating label of the appliance.
2. Check if the socket and the plug are undamaged and put the plug well in the socket.
3. Put the appliance on a stable and flat surface for no risk of falling down.
4. Be sure that there is enough space for the fan heater while operating, at least 50 cm around the appliance, and right before the air outlet, the distance should be at least 120 cm.

 
SAFETY PRECAUTIONS

1. Don't cover the fan heater at any time when operating.
2. Don't hung it on the wall.
3. Don't use it on the carpet with long fluff.
4. Don't use the heater in the immediate surrounding of a bath, a shower or a swimming pool.
5. Don't insert sticks or any other objects to either the air inlet or the outlet of the appliance.
6. Don't put the appliance immediately below a electrical socket.
7. Don't put the appliance near a fire.
8. Keep children away from the heater.
9. Keep flammable and explosive objects away from the heater.
10. In case of malfunction or abnormal operation, don't attempt to open or repair the appliance at home, send the heater to appointed service agent for inspection and repair.
11. If the power cord is damaged, it must be replaced by the appointed service agent or a similarly qualified person.

OPERATION INSTRUCTIONS

1. Turn the thermostat switch to the minimal value, at the same time turn the heat select switch to the "O" position (see picture).
2. Plug in the appliance, and turn the thermostat switch to the maximum position. Then turn the heat select switch to choose air or warm air and the temperature of warm air as below. While working the indicator light will be on.
 - 2.1 Turn the heat select switch to "❄️" position, the heater blows cool air.
 - 2.2 Turn the heat select switch to "I" position, the heater blows warm air, working at 1000W.

- 2.3 Turn the heat select switch to “II” position, the heater blows warm air, working at 2000W.
- 2.4 Turn the heat select switch to “O” position, the heater stops working, the indicator light will be off.
3. Adjust the thermostat switch to suitable position for desired temperature setting.
- 3.1 Check if the thermostat switch is on the maximum position.
- 3.2 When you feel the room temperature comfortable, turn the thermostat switch anti-clockwise slowly to the minimal position until the appliance stops working.
- 3.3 Then the thermostat switch will keep the room temperature at the desired temperature automatically.
- 3.4 You can also turn the thermostat switch anti-clockwise to the minimum position or turn the thermostat switch clockwise to maximum position to make the temperature lower or higher.

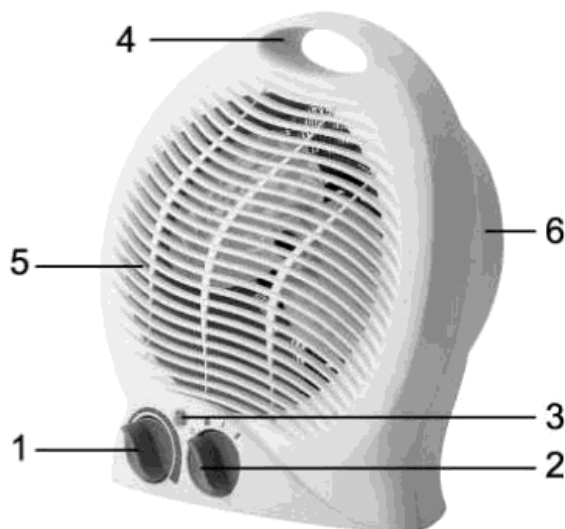


1. Thermostat switch
2. Heat select switch
3. Power indicator light
4. Handle
5. Air outlet grill
6. Air inlet grill

SECURITY SYSTEM

 
1. To avoid risk to human being or damage to internal components, the fan heater has a security system which will automatically switch off the appliance if the heat reaches the safety limit. If overheating occurs:
- 1.1 Turn the heat select switch to “O” position, turn the thermostat switch to the minimal position and remove the plug from the socket.
- 1.2 Check if the air flows smoothly before the outlet and inlet, and if the appliance is put in right position. If so, get it in order before restart the appliance.
- 1.3 Let the fan heater cool down for 8 to 10 minutes before you start it again.
- 1.4 Plug in the appliance and switch it on. If the appliance can't operate normally, remove the plug immediately from the socket and have the fan heater serviced by an appointed service only.

MAINTENANCE AND CLEANING

1. Before you turn off the appliance, turn the heat select switch to the “” position. After operating for 3 to 5 minutes to lower the internal temperature of appliance, then turn the heat select switch to “O” position.
2. Clean the air inlet and air outlet of the appliance regularly (at least twice a year normally).
3. Before you clean the appliance, turn off the heater first, then remove the plug from the socket, and wait until the appliance cools down.
4. Use a damp cloth to clean the surface of appliance, avoid water going inside the appliance, dry the appliance before use or store.


This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

CORRECT DISPOSAL OF THIS PRODUCT

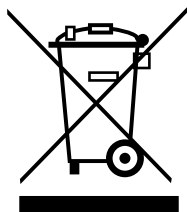

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

 ELECTRIC FAN HEATER 1000/2000W

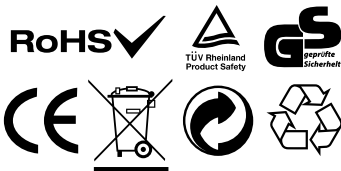

elpine
A NAME YOU CAN TRUST!

Elpine B20 3BT UK

UK PLUG REWIRING

Your appliance operates on 220-240V-50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows:

IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE : NEUTRAL (N)

BROWN : LIVE (L)

GREEN & YELLOW : EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter “N” or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter “L” or coloured RED.

The wire which is coloured GREEN & YELLOW must be connected to the terminal which is marked with the letter “E” or  or coloured GREEN.

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

This appliance must be protected by a 13-amp fuse in a 13-amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS 1362 fuse.

