

Convector Heater

2000w



- 2000 watts
- Portable
- Three heat settings
- With thermostat
- 230-50Hz 2000w

H44cm

W14cm

L62.5cm

Net Weight: 3kg

Gross Weight: 4kg



Elpine B20 3BT



PRODUCT USE, CARE AND SERVICE WARRANTY INSTRUCTIONS DO NOT TURN RADIATORS UPSIDE-DOWN DURING OPERATION

TECHNICAL CHARACTERISTICS

Convactor heater with thermostat.

 
RATED POWER INPUT: 2000W

RATED VOLTAGE RANGE: AC230V 50Hz

IMPORTANT Read these instructions fully before using the heater. Retain these instructions for future reference.

ASSEMBLY OF THE HEATER

Before using the heater, the feet (supplied separately in the carton), must be fitted to the unit. These are to be attached to the base of the heater using self-tapping screws provided, taking care to ensure that they are located correctly in the bottom ends of the heater side molding.

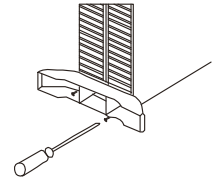

SAFETY INSTRUCTIONS (to be read before operating the heater)

 
1. Do not use the heater unless the feet are correctly attached if the heater is used as portable appliance.
2. Ensure the power supply to the socket into which the heater is plugged is in accordance with the rating label on the heater and that the socket is earthed.
3. Keep the mains lead away from the hot body of the heater.
4. The heater is not suitable for use in bathrooms, laundry areas or similar indoor locations.
5. Do not use outdoors.
6. Do not cover or obstruct any of the heat outlet grilles or the air intake openings of the heater.
7. Do not place the heater on carpets having a very deep pile.
8. Always ensure that the heater is placed on a firm level surface. Ensure that the heater is not positioned close to curtains or furniture as this could create a fire hazard.
9. Do not position the heater in front of, or immediately below, a wall socket.
10. Do not insert any object through the heat outlet or air intake grilles of the heater.
11. Do not use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
12. Particular care should be taken when the heater is situated in areas occupied by children or invalids.
13. Always unplug the heater when moving it from one location to another.
14. Do not use the heater if the power cord is damaged. If the power cord is damaged it must be replaced by a recognised service agent or other qualified person. If the plug is damaged, see Plug Replacement details below.
15. Young children should be supervised to ensure that they do not play with the appliance.
16. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out

this appliance must not be supplied through an external switching device such as a timer or connected to a circuit that is regularly switched on and off by the utility

OPERATION OF THE HEATER

NOTE: It is normal when the heaters are turned on for the first time or when they are turned on after having not being used for a long period of time that they may emit some smell and fumes. This will disappear when the heater has been on a short while.

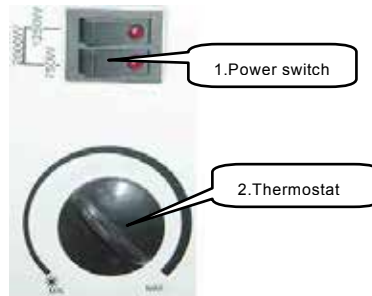

CONVECTOR HEATER WITH THERMOSTAT 31109c

Choose a suitable location for the heater, taking into account the safety instructions above.

Insert the plug of the heater into a suitable socket.

Turn the thermostat knob fully in a clockwise direction to the maximum setting.

Turn on the heating elements by means of the rocker switches on the side panel. When the heating elements are on the switches will illuminate. For maximum heat output both switches should be on.

When the desired room temperature has been reached, the thermostat knob should be turned slowly anti-clockwise until the thermostat is heard to click off and the lights on the element switches are seen to go out. After this the heater will keep the air temperature in the room at the set temperature by switching on and off automatically.

CLEANING THE HEATER

Always un-plug the heater from the wall socket and allow it to cool down before cleaning. Clean the outside only of the heater by wiping with a damp cloth and buff with a dry cloth. Do not use any detergents or abrasives and do not allow any water to enter the heater.

STORING THE HEATER

When the heater is not used for long periods of time it should be protected from dust and stored in a clean dry place.

WALL- MOUNTING THE HEATER

 
CAUTION: - there should be a distance of at least 80 cm between the lower part of the appliance and the floor.

- the feet must be removed before mounting the appliance on the wall

1. Measure the distance between the two slots situated at the back of the appliance



(see picture A)

2. Drill two holes at the same distance in the wall and insert a plug in each hole you just drilled. Place the brackets facing the holes as indicated on picture B and attach them in this position with the screws supplied.
3. Before attaching the appliance on the brackets, attach the two other brackets underneath the appliance as indicated on picture C.
4. Attach the appliance on the wall. To do so, hold it in such way that the slots are facing the brackets; insert the appliance halfway onto the brackets until the appliance can go down into the grooves of the brackets.
5. As soon as the appliance is positioned correctly, take a pencil and mark a dot in the hole of each bracket situated underneath the appliance.
6. Then take off the appliance by proceeding the other way around compared to point 4 above.
7. Drill a hole in the wall on each dot you just marked and insert a plug in each hole.
8. Attach the appliance back on the wall as indicated in point 4, insert screws through the brackets underneath the appliance and tighten without forcing.

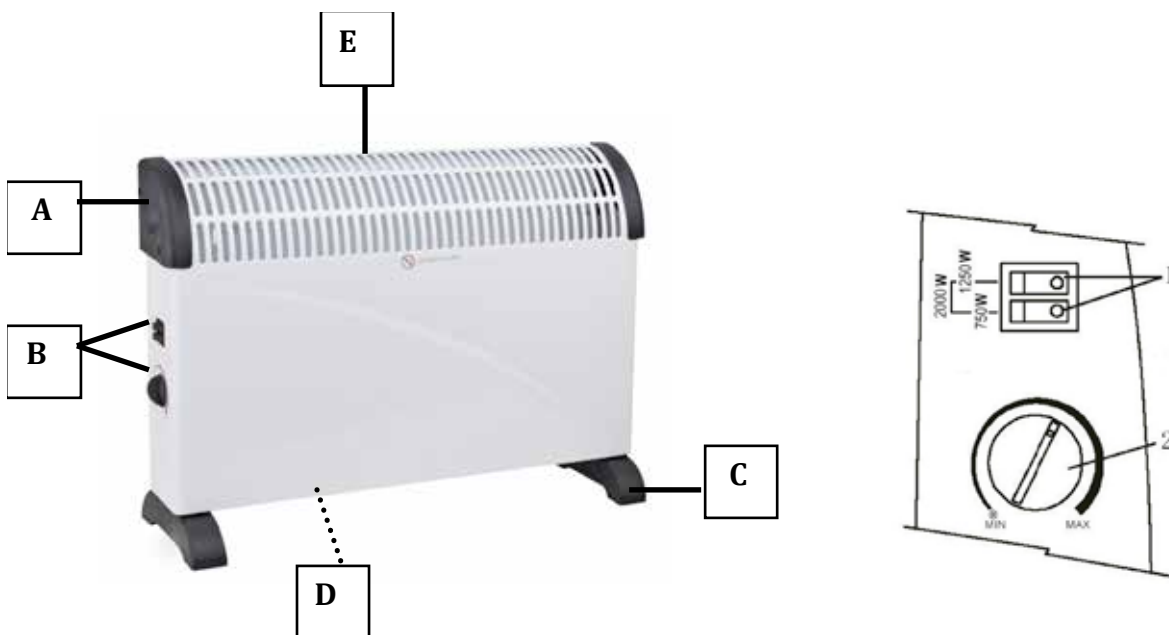

- A. Handle
- B. Control panel
- 1. Power selector
- 2. Thermostat knob
- C. Feet
- D. Air inlet grid
- E. Air outlet grid

  WALL-MOUNTING

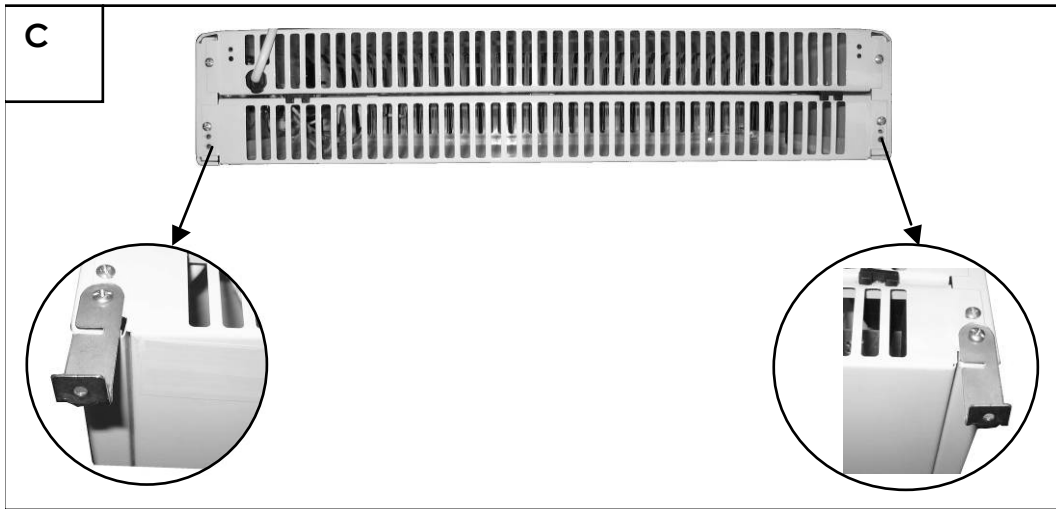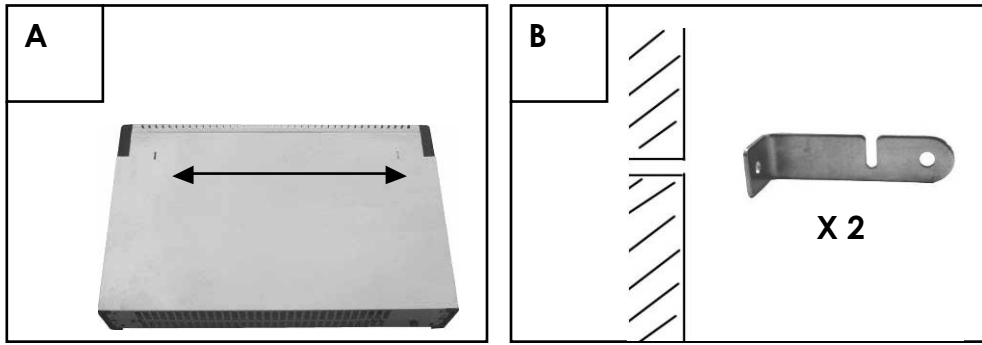

31109c
Elpine
A NAME YOU CAN TRUST!

Convector Heater

2000w

