

# INSTRUCTION MANUAL

31201c  
**elpine**  
A NAME YOU CAN TRUST!

## 0.8 LITRE AUTOMATIC RICE COOKER



- 0.8 Litre capacity
- Non-stick removable rice bowl
- Toughened glass lid with steel rim
- Keep warm feature
- Warm & Cook LED indicators
- Includes measuring cup & spatula



Elpine B20 3BT

Images are for illustrative purposes only,  
actual product may vary.

## **INTRODUCTION**

Thank you for purchasing this quality Elpine product. Used carefully and in accordance with the instructions set out below, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

## **FEATURES**

- Capacity: 0.8 Litre
- Easy Cleaning
- Non-Stick Removable Rice Bowl
- Warm & Cook Led Indicators
- Keep Warm Feature
- Toughened Glass Lid With Steel Rim
- Includes Measuring Cup & Spatula

## **IMPORTANT SAFEGUARDS**

**When using your electrical appliances, basic safety precautions should always be followed including the following:**

- 01). Read all instructions carefully.
- 02). Do not touch hot surfaces, use handles or knobs.
- 03). To protect against electrical shock do not immerse cord, plugs, or main body in water or other liquid.
- 04). This Appliance should not be used near or by children.
- 05). Unplug from outlet when not in use and before cleaning.
- 06). Do not operate any appliance with a damaged cord or plug. If this appliance is damaged in anyway or suffers malfunction, return appliance to the nearest authorised service agent.
- 07). The use of accessory attachments is not recommended by the appliance manufacturer may cause injury.
- 08). Do not use outdoors.
- 09). Do not let cord hang over edge of table or counter, or touch hot surfaces.
- 10). Do not place on or near a hot gas or electric burner, or heated oven.
- 11). Extreme caution must be used when moving an appliance containing hot oil or other liquids.
- 12). Do not use appliance for other than its intended use.
- 13). This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

## **SAVE THESE INSTRUCTIONS.**

\*These units are “for household use” Preheating of the appliance is not necessary.

### **OPERATING INSTRUCTIONS:**

Please read this instruction carefully before using the appliance.

### **CAUTION TO READ BEFORE USING RICE COOKER:**

- 01). Only use this product with the correct AC voltage outlet. (Correct rated voltage see box and label at the bottom of rice cooker.)
- 02). Be sure to unplug power cord when pan is not in cooker, or when cooker is not being used. Remember the “KEEP WARM” feature operates whenever the cord is plugged in
- 03). Place the inner pot inside the cooker before operating. Turn the pot gently to right and left.
- 04). If the switch button is difficult to press to the “cook” position, do not try to force it down. This difficulty usually occurs when inner pot is not fully inserted in cooker or when cooking has just finished.
- 05). Place the lid on your inner pot while cooking, keep the lid in place after serving to prevent your rice from drying out or discolouring.
- 06). Keep bottom of inner pot and surface of heater plate free of foreign matter to prevent operating malfunctions.
- 07). Clean the inner pot thoroughly before 1st use.


### **MAINTENANCE PROCEDURES**

- 01). Remove inner pot and lid and wash them in hot soapy water, taking care to rinse completely, then dry with a soft cloth.
- 02). Clean outside of cooker with a clean damp cloth. Never clean any part of the cooker with abrasive cleaner. Use a damp cloth or sponge with water and mild detergent. Do not submerge any part of cooker in water. Wash only inner pot and lid.
- 03). To clean the heating plate and thermo-control plate, use steel wool to polish or remove any residue. Then wipe with a damp cloth. Allow to dry completely before re-using. You must keep the heating plate and thermo-control plate free from any foreign objects, otherwise the cooker will not operate properly.
- 04). Improper cleaning of cooker may cause unpleasant odours.
- 05). Non-stick inner pot should not be cleaned with an abrasive cleaner, use plastic kitchen utensils as not to scratch & damage it.
- 06). Do not wash rice in inner pot otherwise it could damage the Non-stick coating.

07). Do not use cooking oil in the inner pot.

## HOW TO USE

01). Using the measuring cup provided in the package to measure and add rice to the inner pot.

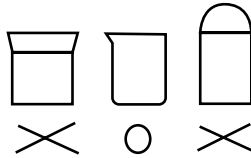

02). Use measuring cup to add the required amount of water to the rice inside the inner pot. See chart below.

Cups of Raw Rice	Water add to the line on pot
15 cups	15 - 15 1/2 cups
10 cups	10 - 10 1/2 cups
8 cups	8 - 8 1/2 cups
6 cups	6 - 6 1/2 cups
4 cups	4 - 4 1/2 cups
2 cups	2 - 2 1/2 cups

03). Set inner pot in cooker. Place rice and water in inner pot. Close the lid firmly.

04). Plug in power cord. Do not plug in until ready to cook. Otherwise, rice may be spoiled. If pot is not in cooker, cooking will not begin.

05). Press switch. “cook” indicator tells you cooking has started.


06). When rice is done, the switch will pop up. After the switch pops up, leave covered for at least 15 minutes to steam rice.

07). Unplug after each use. Grasp the plug, not the cord.

08). When you stew, the water level should not more than 70% of the volume.

09). Do not touch the ventilating hole for fear scalding.

## CAUTION

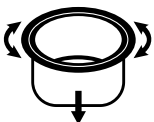

**BEFORE STARTING TO COOK, CLEAN THE BOTTOM OF THE INNER POT AND THE SURFACE OF THE HEATER PLATE, THEN TURN THE INNER POT CLOCKWISE AND ANTI- CLOCKWISE SO THAT IT SITS PROPERLY ONTO THE HEATER PLATE INSIDE THE RICE COOKER. OTHERWISE, THE RICE COOKER WILL NOT WORK OR WILL BE DAMAGED.**



## UK PLUG REWIRING

Your appliance operates on 350w-230v-50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows:

### IMPORTANT:


The wires in the mains lead are coloured in accordance with the following code:

BLUE : NEUTRAL (N)

BROWN : LIVE (L)

GREEN & YELLOW : EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in you plug, proceed as follows:

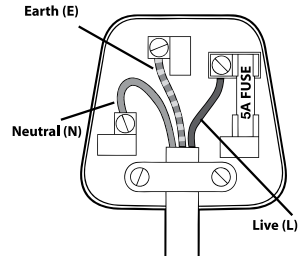

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter “N” or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter “L or coloured RED.

The wire which is coloured GREEN & YELLOW must be connected to the terminal which is marked with the letter “E” or  or coloured GREEN.

**DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL OF A 3-PIN PLUG**

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are lightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

This appliance must be protected by a 5-amp fuse in a 5-amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS 1362 fuse.

**THIS IS NOT A TOY: KEEP THIS PRODUCT OUT OF REACH OF CHILDREN. THIS APPLIANCE IS NOT INTENDED FOR USE BY CHILDREN.**

# 0.8 LITRE AUTOMATIC RICE COOKER

RoHS ✓ CE □



31201c  
**elpine**  
A NAME YOU CAN TRUST!



Elpine B20 3BT