

INSTRUCTION MANUAL



67098c
MARKSMAN
QUALITY TOOLS

24V CORDLESS DRILL 2PC COMBO TOOL SET



Cordless drill: 24V, 1200mAh two batteries

Speed: 0-1150RPM, with Impact

Torque Grade: 16+1

13mm keyless chuck

Electric hammer:

230V, 50HZ, 1050W 13mm, 0-850RPM



WARNING

Using Handtools can be dangerous. Always take care and keep away from children. Wear protection in work area at all times. Select correct type and size tool for the job in hand.



MARKSMAN B20 3BT

0180 ⚠

Actual product may differ from the picture.



WARNING:

1. Always wear safety goggles during use
2. Inspect before use, do not use if parts loose or damaged.
3. Do not use extension bars to increase torque.
4. Keep away from children,
5. Use for intended purposes only
6. Save the manual.

CORDLESS DRILL & DRIVER



Jaws chuck: 1/16 - 3/8 inch




Charger: Input AC 230V-240V 150Hz, Output 24Vdc 2.4A .

RECHARGING BATTERIES

Your drill is delivered partly charged. Charge fully before first use. Connect charging plug to the charging base. Connect charger to wall socket then the power indicator will light up. Put your battery into the charging base, the charging light indicator will show charging in process.

When the charger is connected to the power supply, the green light will illuminate, when put the battery is placed in the charger the RED and GREEN lights will illuminate together. Charge time is between 3 to 5 hours.

Do not exceed 5 hours at one charge.

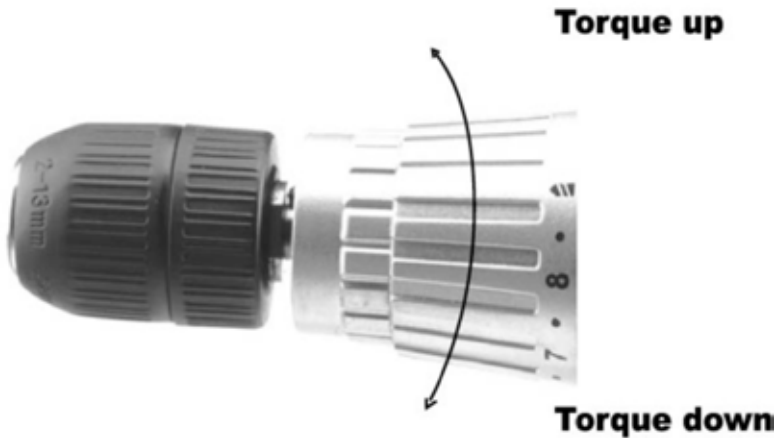

TORQUE ADJUSTMENT

Your drill is fitted with a variable clutch which is operated with the torque adjustment ring. Once adjusted the clutch will work at a predetermined torque this avoids screwing too deeply or damaging your drill. Torque adjustment varies with the types of screws used and working material. Always start using a low torque and increase gradually to achieve suitable operating.

WARNING

Charging time must not exceed 5 hours, any longer may cause damage to the battery. Avoid charging your drill in freezing conditions, ie below zero degrees centigrade. Charging power would not be sufficient at these temperatures.

Never use other chargers, use only the one provided.

Never use this one with other devices.

Never change direction (backward / forward) while chuck is rotating. It will damage the drill.

When cleaning your drill never use any detergent or alcohol solution.

Always use a soft and dry cloth.

When charging more than one pack in succession, allow 30 minutes between charges.

24V CORDLESS DRILL 2PC COMBO TOOL SET



WARNING

Using Handtools can be dangerous. Always take care and keep away from children. Wear protection in work area at all times. Select correct type and size tool for the job in hand.



MARKSMAN B20 3BT