

INSTRUCTION MANUAL



66091c
MARKSMAN
QUALITY TOOLS

PORTABLE GAS STOVE



Recommended
Marksman Butane Gas



COMPACT AND LIGHT ECONOMICAL TO USE

- Automatic Safety Shut-Off
- No Matches Necessary
- Wind shield to Protect Flame
- With Flame Adjustment Control
- Lightweight Design, Easy to Carry
- Ideal for Camping Picnics / General Outdoor Use
- With Storage/carrying Case

Suitable for:

Picnics, Camping, Garden, Patio and many more outdoor uses



WARNING

Always use in a well ventilated location,
take care & keep away from children. Wear
protection in work area at all times.



5 038673 660912



MARKSMAN B20 3BT UK

Actual product may differ from the picture.



WARNING:

Precautions! Please read and follow carefully.

1. Inspect before use, do not use if parts loose or damaged
2. Keep away from children and pets
3. Always use in a well ventilated location
4. Use for intended purposes only
5. Save the manual

1. When the gas canister empty, DO NOT throw the empty can onto an open fire.



2. Avoid the food from overflowing. If food overflows, wait for the drip tray to cool down and wipe out the overflow with water and soap.



3. It is dangerous to use the gas burner for any other purposes, only use for cooking.




4. If the burner is not working, turn the control knob clockwise to shut off the gas supply. Return the lever to "Unlock" position to release the gas canister.



5. Avoid the gas burner from overheating. DO NOT use two gas burners in parallel.




6. Ensure the gas canister is correctly fitted into the gas burner valve. If not, the gas will leak. If you smell gas, DO NOT attempt to light appliance. Extinguish any open flame.

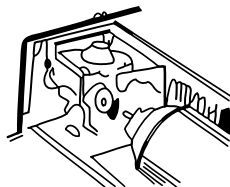

7. Do not use in exposed and windy locations as there is a risk of the flame being extinguished. Ensure the gas always remain lit.




8. Always place on heat proof surfaces of away from inflammable materials. Keep at least 30 cm of clearance from surroundings.

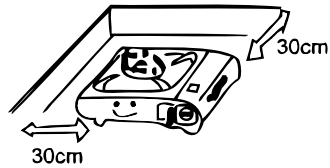

9. Do not place the burner in direct sunlight, find a shady location, away from sand and soil ground.



10. If the control knob does not move, the pan holder is likely inverted and not correctly in position.

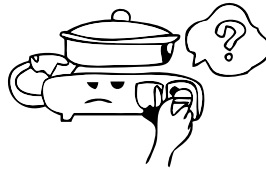


NOTE:


1) Make sure the can level is in the “unlock” position; Otherwise the gas canister can not be put into position. Open the gas can cover and place the gas canister in position by aligning notch of the gas canister with locator tab in the burner.

2) If there is a leak on your appliance, you will smell gas or hear ”hiss” sound.

3) Always check that the seals (between the appliance and the gas container) are in place and in a good condition before connecting the gas container for the first time, repeat this at all times when replacing the gas container with a new one.

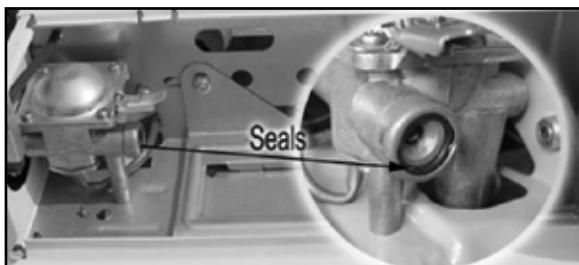


Name and Function of Each Part

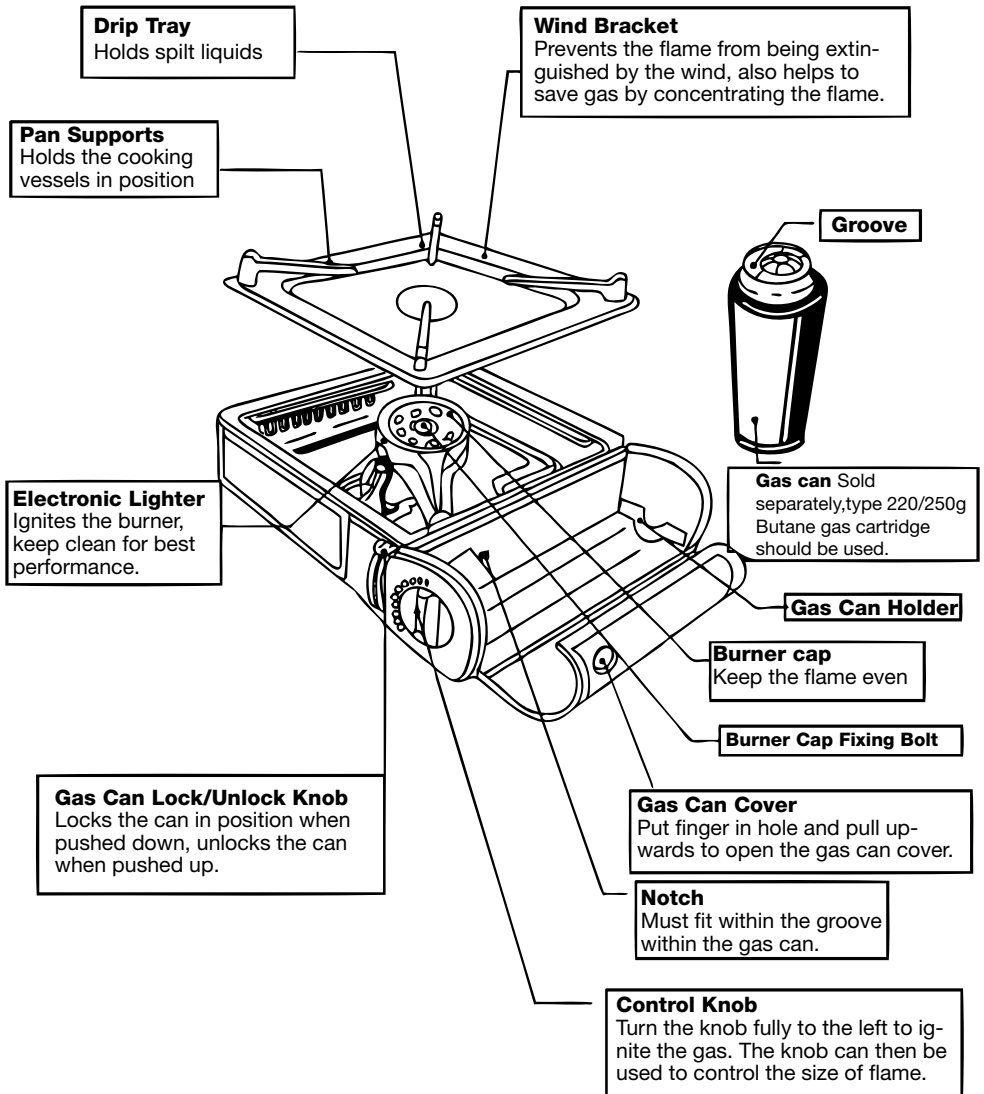

Operating Instructions


Read and follow the below instruction to ensure safe operation of your butane gas burner.

- 1** Install the drip tray and open the gas can cover.

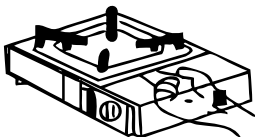


Ensure the pan supports on the drip tray face upwards. Open the gas can cover by placing your finger in the hole on the top and pull it upwards.

- 2** Place the gas can on the gas can carrier.

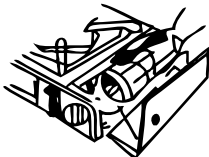


The groove in the gas can must line up with the notch at the top of the on/off switch. If these do not line up then the gas canister cannot be punctured correctly and the unit will not operate.

- 3** Lock the gas can in place.

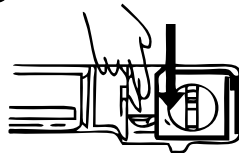


Push the gas canister button down to Lock it into position. Note: If the drip tray is placed upside down the gas canister cannot be locked into position.

- 4** Close the gas can cover.

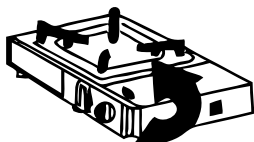

Shut it as is shown above.

- 5** Ignite the burner by turning the control knob to the left.

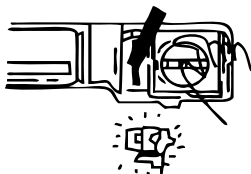


Turn the control knob to the left until a clicking sound is heard, the flame should then ignite. If no flame can be seen after several attempts shut the gas off and check the canister is installed correctly.

- 6** Place the cooking vessel on the pan supports and adjust the flame height accordingly.



To make the flame smaller turn the control knob to the right, to make it larger turn it to the left.

- 7** When the cooking is finished turn the gas supply off.

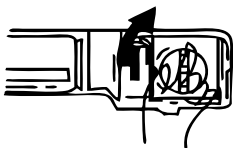

Turn the control knob all the way to the right until it is in the off position. The gas is now turned off and the flame extinguished.

- 8** Unlock the gas canister.



Push the gas can holder knob upwards to unlock the gas canister. This should be done every time the burner is not in use.

Instructions for Use, Maintenance & Assembly

Important:

Important: Read these instructions for use carefully so as to familiarize yourself with the

appliance before connecting it to its gas container. Keep these instructions for future reference,

if you pass the product on pass the instructions on with it.

- Portable Gas Stove
- This appliance shall only be used with the MSF-1A butane cartridge.
- Fuel consumption - 150g/hour.
- Nominal heat input:2.0 kW.
- Gas Type: Butane
- Gas Category: Vapor pressure-butane

Safety Warnings:

Please be aware of the following safety information before using your product;

- Always check that the seals (between the appliance and the gas container) are in place and in a good condition before connecting the gas container for the first time, repeat this at all times when replacing the gas container with a new one.
- Do not use an appliance which is leaking, damaged or does not operate properly.
- Only use the appliance in a well ventilated area in accordance with national requirements for the supply of combustion air and to avoid the dangerous building up of un burnt gases.
- The appliance should only be used a horizontal surface, always ensure the product is stable before using.
- The appliance must be placed away from flammable materials and away from items such as shelves and cupboards. The appliance should be a minimum of 30cm away from any adjacent surfaces.
- When changing the gas container do so in a well ventilated area, preferably outside and always away from any sources of ignition such as naked flames etc.
- If there is a leak on your appliance (smell of gas), take it outside immediately into a well ventilated flame free location where the leak

source can be determined and stopped. Do not try to detect leaks using a flame, use soapy water.

- When not in use store the appliance in the plastic case provided Ensure that all gas canisters are removed before storage.
- Do not throw used gas cans into the fire or your domestic rubbish. They should be disposed of via your local recycling facility.
- Do not use this appliance for any other purpose than cooking, doing so may cause injury.
- Do not place two cookers side by side or use too large a pan, doing so can cause the appliances to overheat.
- The product has a built in drip tray should a liquid be spill. If this happens turn the appliance off and clean the drip tray thoroughly.

For your safety:

Do not store or use gasoline for methylated fuels or any other flammable vapors and liquids in the vicinity of this or any other appliance. Never light a camping stove with gasoline or comparable fluids!

Caution:

- 1) Accessible parts may become very hot. Keep young children away from the appliance.
- 2) Caution: the phenomenon of flaring may occur during the warm up period or if the appliance is moved.
- 3) Check that burners are extinguished before disconnecting the gas container.
- 4) Check the gas container before connecting a new gas container to the appliance
- 5) Change the gas container outside and away from people
- 6) Do not modify the appliance;

Portable Gas Stove Safety Hints

Stand your Portable Gas Stove on a safe level surface, away from inflammable items if using indoors always use in a well ventilated area.

Once lit do not move your Portable Gas Stove or leave it unattended.

Keep children and pets at a safe distance for the Portable Gas Stove.

Keep a fire extinguisher handy.

The Portable Gas Stove will become hot when in use, so handle lid etc.

With the help of mitts or oven gloves.

Ensure that the appliance has completely cooled down before storing.

NOTE: KEEP IN A SAFE PLACE FOR FUTURE REFERENCE

PORTABLE
GAS STOVE



66091c

MARKSMAN
QUALITY TOOLS



WARNING

Always use in a well ventilated location,
take care & keep away from children. Wear
protection in work area at all times.



MARKSMAN B20 3BT UK

