

# Stainless Steel Adjustable Mandoline Slicer



Instruction Manual: 18335c



Always use plastic protective food holder when using the mandoline. The blades are very sharp.


**This Mandoline can function in 2 ways:**

**Diagram A**



**Standing Mandoline:** fold down the stand found underneath the mandoline. The non-skid feet on both the mandoline and stand will stop the mandoline from moving while you are slicing.

**Diagram B**

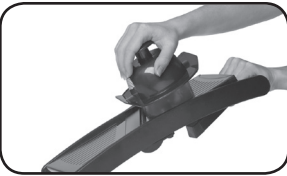


**Hand Mandoline:** hold the handle at the top of mandoline while leaning the non-skid feet against the cutting surface.

**Diagram C**



Push and turn adjustment knob on the side of the mandoline to switch from regular blade to julienne. Also look at the markings on the adjustment knob to find the 5 different thicknesses available.

To clean mandoline, follow these steps:

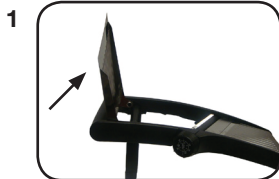

Carefully flip up the food runway



Carefully pull up on the rotating adjustment cylinder to pop out for an easy clean

To replace parts back into Mandoline:

1. Replace rotating adjustment cylinder; please hold by adjustment knob, as blades are very sharp.
2. Carefully place food runway back into place

**Warning:** please use food holder to protect hands while slicing.

Not intended for use by children. Hand wash only.

**Warning:** Blades are sharp, please use care during use and when disassembling.

#### Caution - SAFETY INFORMATION

Blade is extremely sharp and can cause serious Injury. Keep out of reach of small children. Failure to comply with all warnings could result in serious bodily injury. Wear protection in work area at all times.



PRIMA B20 3BT UK

