Handheld Steam Cleaner

31077c

Elpine
A NAME YOU CAN TRUST!

- Pressurised steam removes tough grease
- Sanitize and cleans with steam
- No chemical required
- Swivel nozzle
- Insulated handle stays cool

Wrinkle remover

Sweep the wall

Perfect for grease removal

Sweep the glass

Household use just add water

Tools Included

Sanitize bathroom

Sanitizes & cleans with steam

User Manual for 31077c Steam Cleaner

Table of Contents

RoHS ✓ TÜV GS CE

Product images are for illustrative purposes only

Product Characteristics:

Technically leading

This high-temperature and high-pressure steam is used for cleaning away any dirt/ stains on floor boards, doors, windows and clothes.

The machine can also be used for killing bacteria on surfaces.

Steam can be generated due to automatic heating control. Continuous cleaning made easy.

As no chemical agents are added, it is environment-friendly cleaning.

Safety Features

The machine will automatically disconnect the power supply and thus prevent heating after the water has evaporated.

Fitted with sensitivity thermostat, 135°C high-temperature steam is available.

The safety valve has automatic pressure release function. .

Fitted with 3-pin power plug. To BS1363/A

Durable

The machine has an aluminum boiler body with extra-thick inner wall.

As the shell is made from high strength quality plastic it is anti-corrosion.

Energy-saving
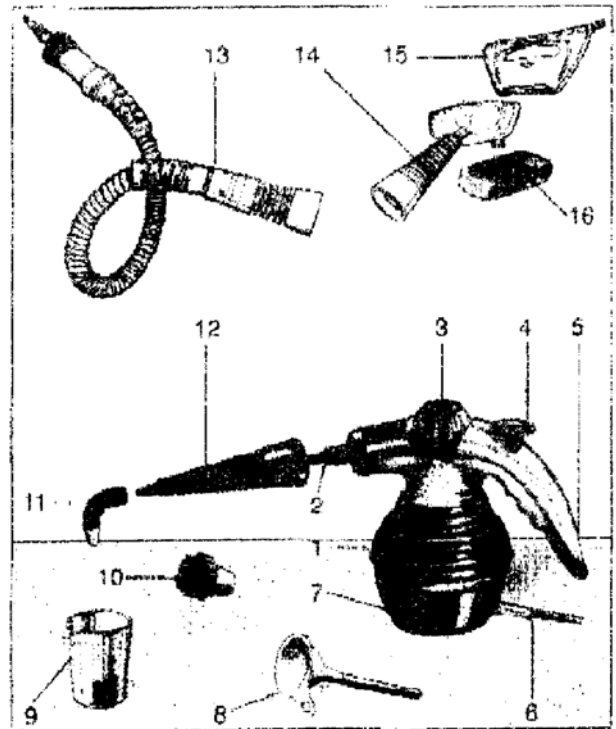
The design of specially made heating tubes and boiler body ensures heating efficiency with energy-saving.

Easy to use

With the range of cleaning accessories supplied, the machine can be assembled and disassembled easily.

Description of Structuring Parts

1. Body
2. Short spray nozzle
3. Safety cap
4. Steam button
5. Handle
6. Power cord and plug
7. Power Indicator
8. Funnel
9. Measuring cup
10... Spray cup with round brush
11... Bent spray nozzle
12... Long spray nozzle
13... Extended connecting spray nozzle
14... General spray nozzle
15... Spray nozzle for door/window
16... Towel sleeve

Safety Precautions

🚫 This icon represents "Danger" ❗ This icon represents "Warning"

1. Do not allow children to use this machine, or to be near machine when in operation 🚫

2. Do not immerse power cord or power plug in water or other liquids. 🚫

3. The power cord and power plug should be in good condition. Any signs of damaged or defective to the power cord or plug must be repaired by a qualified electrician before use can continue. ❗

4. This product is for domestic use only. 🚫

5. Do not turn on power supply until the tank contains the appropriate level of water. 🚫

6. Power supply used should comply with the product requirements of the manufacturer. ❗

7. Never over fill the tank with water. Ensure the safety cap of the tank is fully tightened before use. ❗

8. The machine body must not be inclined at more than 45 degrees during use, in order to prevent uncontrolled spraying of boiling water/steam. 🚫

9. Do not direct the steam towards persons, animals or other electrical products. 🚫

10... Before refilling water, or cleaning, disconnect power supply and allow cooling. 🚫

11. Do not use any cleaning agent/de-scaler in the tank, as this could cause damage to the tank. ❗

Preparations Before Use

• Read the User Manual carefully and keep for future reference.

• Check the accessories supplied with the machine.

Accessories supplied with the machine

Name	Funnel	Measuring cup	Spray cup with hairbrush	Towel sleeve	Long spray cup
Qty	1	1	1	1	1
Name	Spray cup for door/window	Spray cup with round brush	Bent spray cup	User Manual	Spray cup of connecting pipe
Qty	1	1	1	1	1

Technical Specification

Rating of power supply: AC/220-240V 50Hz, fitted with 5 AMP fuse.

Tank capacity: 250ml

Max capacity of water cup: 175ml

Rated power: 900W

Steam pressure:0.25MPa~0.42 MPa

Injected steam capacity: 28g/min

Temperature controller: functioning temperature: 135^{o}C

Fusser: functioning temperature: 169^{o}C

Overall dimension: 285×145×225mm

Net weight: 1.36kg

Operating Instructions

1. Unpack the product, check the accessories and documents supplied with the product and make sure that the product and accessories are not damaged.

2. Before use, please read this User Manual carefully. The steam cleaner is for domestic use only.

3. First, place the steam cleaner on a level platform, push down the safety cover, unscrew the safety cap anti-clockwise, and then install the funnel. As following chart :

(I)   (II)

4. Take 175ml clean water with the measuring cup, and add the water into the tank. (Max. capacity of the tank is 250ml. Do not overfill the tank as some space must be left in the tank for expansion). Re-install the safety cap and tighten it in position

5. Check the power supply and socket, and confirm they comply with the requirements given in the User Manual. Then turn on the power supply.

6. About 4 minutes after power supply is turned on, steam is ready. At this time lightly press the steam button and check whether steam is sprayed out of the nozzle. (Do not aim the spray nozzle at other persons or objects).

7. If there is steam sprayed out, please install suitable accessories according to your needs after you release the button.

Functions

Disinfection and sterilization:

Install the long spray cup on the short spray nozzle and aim the spray at the area that needs disinfecting, and then press down the steam button. High-temperature steam can kill bacteria.

Cleaning the clothes

Install the spray cup with hairbrush on the short nozzle, and then mount the towel sleeve. Aim the spray at the hung clothes, and press down the steam button and move the hairbrush up and down as well as to the left and to the right at the same time. Then stains can be removed from the clothes.

Cleaning doors and windows

Install the spray cup with hairbrush on the short spray nozzle, and then install the spray cup for door/window on it. Aim the spray at the door/window, and press down the steam button and move the hairbrush up and down as well as to the left and to the right at the same time. Then stains can be removed from the door/window.
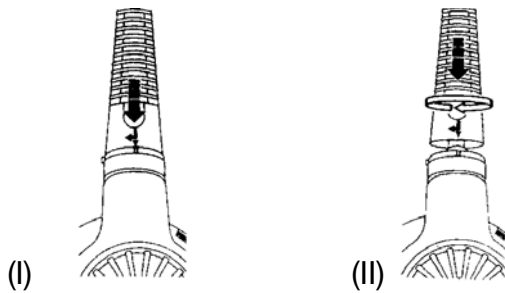
Cleaning the floor boards

Install the extended spray cup on the short spray nozzle.   Then install bent spray cup or round spray cup. Aim the spray at the floor/wall area requiring cleaning, and press down the steam button to remove the dirt and stains.
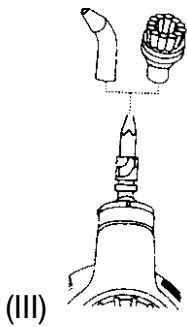
Installation of Accessories

1.... How to install the spray cup with hairbrush

Hold the pipe section of the spray cup with hairbrush in your hand, align the arrow on the spray cup with the single-line mark on short spray nozzle on the machine body, and insert the spray cup in position. Rotate the spray cup in clockwise direction, and align the arrow on the spray cup with the double-line mark on short spray nozzle on the machine body, as shown in Figure 1. Fix the spray cup on the machine body. To remove the spray cup with hairbrush, please rotate the spray cup inversely (anti-clockwise) as shown in Figure 2, and align the arrow on the spray cup with the single-line mark on the machine body. Then the spray cup with hairbrush can be pulled out.
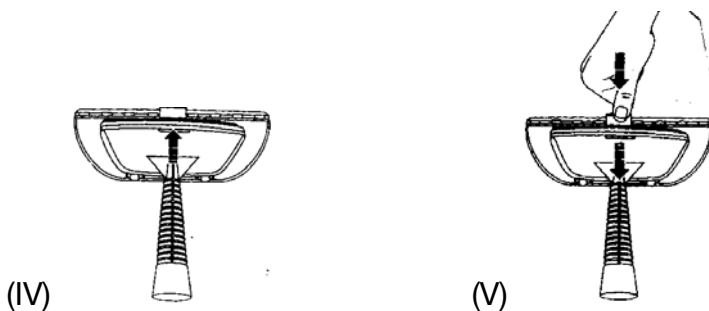
(I) (II)

2.... How to install spray cup with round brush or bent spray cup

For direct installation on short spray nozzle, aim the spray cup with round brush or bent spray cup at the top of spray nozzle, as shown in Figure 3, and push the spray cup upwards until it is in position. As the short spray nozzle and spray cup are positioned in six directions, the angle and direction can be adjusted during the installation. Or, first install long spray cup and then the spray cup with round brush or bent spray cup. The long spray cup is installed in the same method as the installation of spray cup with hairbrush. The spray cup with round brush or bent spray cup and long spray cup is installed in the same way as the installation of the short spray nozzle.

(III)

3.... How to installation of spray cup for door/window

First install the spray cup with hairbrush on short spray nozzle as shown in Figure 4 and Figure 5, install the two small hooks of the spray cup for door/window onto suspension lugs of the spray cup with hairbrush, and then trigger the big hook of the spray cup, and push the spray cup for door/window up and secure it onto the body of the spray cup with hairbrush.

(IV) (V)

Refill water during operation

1. Unplug the power cord and disconnect the power supply

2. Press down the steam button to release the pressure until no steam is present.

3. Slowly unscrew the safety cap but do not remove it, and residual steam will be discharged slowly until no steam comes out. Then place the machine in a cool place to cool it down for about five minutes. Finally, completely remove the safety cap.

4. Use the funnel and measuring cup to refill with a suitable quantity of water.

5. Re-install the safety cap onto the machine body and tighten it in position.

After the machine is used

1. After the cleaning machine is used, unplug the power cord and disconnect the power supply.

2. Press down the steam button to release the pressure until no steam is ejected.

3. Slowly unscrew the safety cap but do not remove it and residual steam will be discharged slowly until no steam comes out. Then place the machine in a cool place to cool down for about five minutes. Finally, completely remove the safety cap.

4. Empty the residual water in the tank and clean the external surface with a dry cloth.

5. Finally, re-install the safety cap onto the machine body and tighten it in position.

1. This appliance is not intended for use by children.

2. Keep away from Children during use.

3. The filling aperture must not be opened during use.

4. WARNING: Danger of scalding.

Applicable Standards: EN60335-1

31077c

Elpine
A NAME YOU CAN TRUST!

B20 3BT

Handheld
Steam Cleaner

• Pressurised steam removes tough grease

• Sanitize and cleans with steam

• No chemical required

• Swivel nozzle

• Insulated handle stays cool

RoHS ✓ TÜV G S C E ♻
geprüfte
Sicherhelt